




Instruction Manual GB

DIGITAL HOME
CINEMA SYSTEM
HT-TXQ120

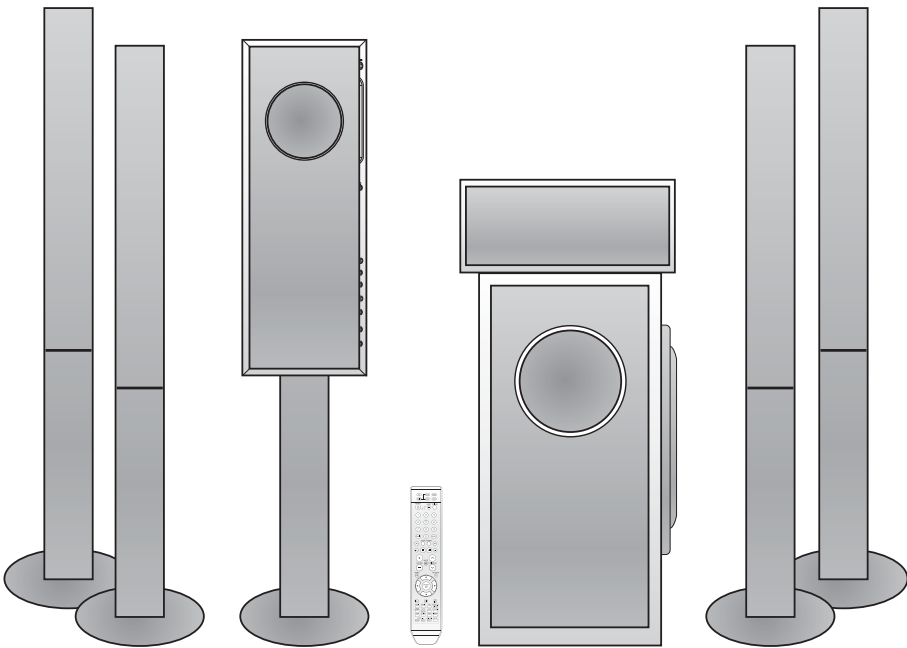

AH68-01959B



Safety Warnings

CAUTION
 RISK OF ELECTRIC SHOCK.
 DO NOT OPEN

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE REAR COVER (or BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

This symbol indicates “dangerous voltage” inside the product that presents a risk of electric shock or personal injury.

This symbol indicates important instructions accompanying the product.

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LUOKAN 1 LASER LAITE
KLASS 1 LASER APPARAT
PRODUCTO LASER CLASE 1

CLASS 1 LASER PRODUCT

This Compact Disc player is classified as a CLASS 1 LASER product.

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION : INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED, AVOID EXPOSURE TO BEAM.

WARNING : To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

- This apparatus shall always be connected to a AC outlet with a protective grounding connection.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

Wiring the Main Power Supply Plug (UK Only)

IMPORTANT NOTICE

The main lead on this equipment is supplied with a moulded plug incorporating a fuse. The value of the fuse is indicated on the pin face of the plug and if it requires replacing, a fuse approved to BS1362 of the same rating must be used.

Never use the plug with the fuse cover removed. If the cover is detachable and a replacement is required, it must be of the same colour as the fuse fitted in the plug. Replacement covers are available from your dealer.

If the fitted plug is not suitable for the power points in your house or the cable is not long enough to reach a power point, you should obtain a suitable safety approved extension lead or consult your dealer for assistance.

However, if there is no alternative to cutting off the plug, remove the fuse and then safely dispose of the plug. Do not connect the plug to a main socket as there is a risk of shock hazard from the bared flexible cord.

Never attempt to insert bare wires directly into a main socket. A plug and fuse must be used at all times.

IMPORTANT

The wires in the main lead are coloured in accordance with the following code:– **BLUE = NEUTRAL BROWN = LIVE**

As these colours may not correspond to the coloured markings identifying the terminals in your plug, proceed as follows:–

The wire coloured BLUE must be connected to the terminal marked with the letter N or coloured BLUE or BLACK. The wire coloured BROWN must be connected to the terminal marked with the letter L or coloured BROWN or RED.

WARNING : DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E OR BY THE EARTH SYMBOL , OR COLOURED GREEN OR GREEN AND YELLOW.


This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.



Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract.

This product should not be mixed with other commercial wastes for disposal.


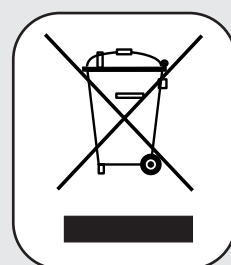


Precautions

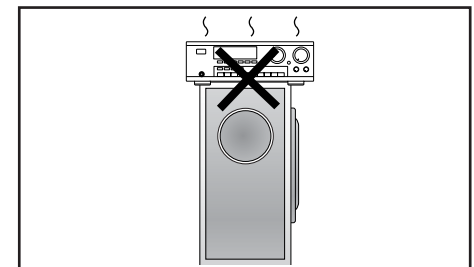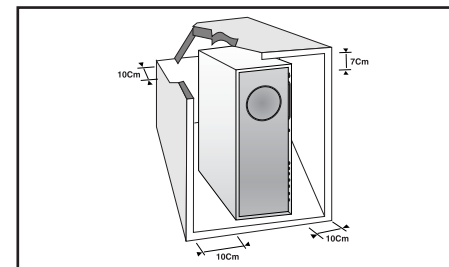

Ensure that the AC power supply in your house complies with the identification sticker located on the back of your player or subwoofer.

Install your player or subwoofer horizontally, on a suitable base (furniture), with enough space around it for ventilation (7.5~10cm). Make sure the ventilation slots are not covered. Do not stack anything on top of the player or subwoofer. Do not place the player or subwoofer on amplifiers or other equipment which may become hot. Before moving the player, ensure the disc insert hole is empty. This player is designed for continuous use. Switching off the DVD player to the stand-by mode does not disconnect the electrical supply. In order to disconnect the player completely from the power supply, remove the main plug from the wall outlet, especially when left unused for a long period of time.

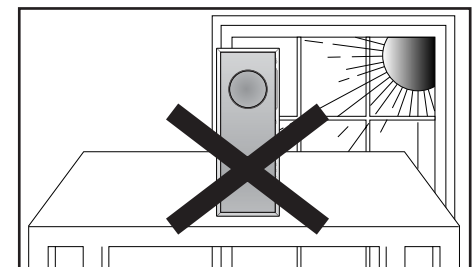
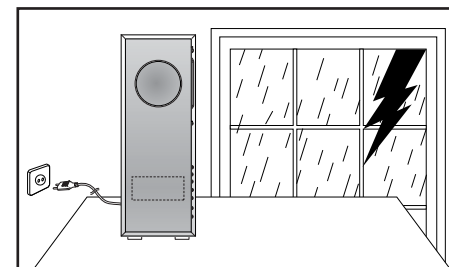


During thunderstorms, disconnect the AC main plug from the wall outlet.

Voltage peaks due to lightning could damage the unit.

The Mains plug is used as a disconnect device and shall stay readily operable at any time.

Do not expose the unit to direct sunlight or other heat sources. This could lead to overheating and malfunction of the unit.

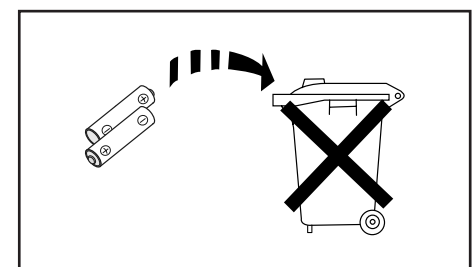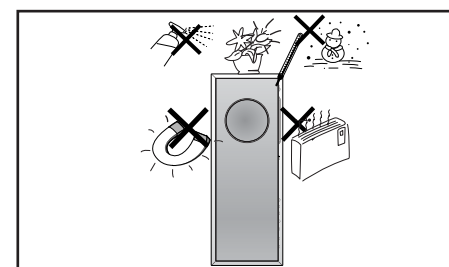

Protect the player from moisture (i.e. vases) , and excess heat (e.g.fireplace) or equipment creating strong magnetic or electric fields (i.e.speakers...). Disconnect the power cable from the AC supply if the player malfunctions. Your player is not intended for industrial use.

Use of this product is for personal use only.

Condensation may occur if your player or disc has been stored in cold temperatures.

If transporting the player during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

The batteries used with this product contain chemicals that are harmful to the environment.

Do not dispose of batteries in the general household trash.

Multi-Disc Playback & FM Tuner

The HT-TXQ120 combines the convenience of multi-disc playback capability, including DVD-AUDIO, DVD-VIDEO, SACD, CD, MP3-CD, WMA-CD, DivX, CD-R/RW, and DVD±R/RW, with a sophisticated FM tuner, all in a single player.

DVD-Audio compatible

Experience the super high-quality audio performance of DVD-Audio. The on-board 24-bit/192kHz DAC enables this player to deliver exceptional sound quality in terms of dynamic range, low-level resolution and high-frequency detail.

USB Host Play

You can enjoy media files such as pictures, movies and tunes saved in an MP3 player, digital camera, or USB memory by connecting the storage device to the USB port of the home theater.

SACD Play

You can listen to high quality multi-channel sound that exceeds regular CD playback.

Dolby Pro Logic II

Dolby Pro Logic II is a form of multi-channel audio signal decoding technology that improves upon existing Dolby Pro Logic.

DTS (Digital Theater Systems)

DTS is an audio compression format developed by Digital Theater Systems Inc. It delivers full-frequency 5.1 channel sound.

TV Screen Saver Function

The HT-TXQ120 automatically brightens and darkens your TV screen after 3 minutes in the stop mode. The HT-TXQ120 automatically switches itself into the power saving mode after 20 minutes in the Screen Saver mode.

Power Saving Function

The HT-TXQ120 automatically shuts itself off after 20 minutes in Stop mode.

Customized TV Screen Display

The HT-TXQ120 allows you to select your favorite image during JPEG and DVD playback and set it as your background wallpaper.

HDMI

HDMI transmits DVD video and audio signals simultaneously, and provides a clearer picture. The 1080p resolution provides even clearer pictures.

PREPARATION	
Safety Warnings	2
Precautions.....	3
Features.....	4
Notes on Discs	6
Description	8
CONNECTIONS	
Speaker Installation	12
Installing the DVD player.....	13
Connecting the Speakers	14
Connecting the Optional Wireless Receiving Amplifier ...	17
Connecting the Video Out to your TV	19
Connecting the HDMI IN/OUT	20
HDMI Function.....	21
Connecting Audio from External Components	22
Connecting the FM Antenna	23
OPERATION	
Before Reading the User's Manual	24
Before Using Your Home Theater	25
Disc Playback	26
SACD (Super Audio CD) Playback.....	27
MP3/WMA-CD Playback	28
JPEG File Playback.....	29
DivX Playback	30
Using the Playback Function.....	32
Displaying Disc Information	32
Checking the Remaining Time.....	33
Fast Playback	33
Slow Playback	33
Skipping Scenes/Songs	34
Repeat Playback.....	35
To Select a Repeat Playback Mode in the Disc Information Screen	35
A-B Repeat Playback.....	36
Step Function.....	36
Angle Function	37
Zoom (Screen Enlarge) Function	37
EZ VIEW Function	38
Bonus Group.....	38
Navigating Pages.....	38
Audio Language Selection Function.....	39
Subtitle Language Selection Function	39
Moving Directly to a Scene/Song	40
Using the Disc Menu	41
Using the Title Menu	41
Playing Media Files using the USB HOST feature.....	42
SETUP	
Settings.....	44
Setting the Language.....	44
Setting TV Screen type.....	45
Setting Parental Controls (Rating Level)	46
Setting the Password.....	46
Setting the Wallpaper	47
To Select One of the 3 Wallpaper Settings you've made.....	47
DVD Playback Mode.....	48
DivX (R) registration	48
SACD Playback Mode	49
Setting the Speaker Mode	49
Setting the Delay Time	50
Setting the Test Tone	51
Setting the Audio.....	52
Setting the DRC (Dynamic Range Compression)	53
Setting the AV SYNC	53
Dolby Pro Logic II Mode	54
Dolby Pro Logic II Effect.....	55
MISCELLANEOUS	
Auto Sound Calibration Setup	56
Live Surround Mode	58
Listening to Radio.....	60
About RDS broadcasting	61
Convenient Functions.....	63
Operating a TV with the Remote Control	64
Troubleshooting	66
Cautions on Handling and Storing Discs.....	68
Language Code List	69
USB Host Feature Supported Products	70
Specifications.....	71



DVD (Digital Versatile Disc) offers fantastic audio and video, thanks to Dolby Digital surround sound and MPEG-2 video compression technology. Now you can enjoy these realistic effects in the home, as if you were in a movie theater or concert hall.



DVD players and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play. The Region Number for this player is given on the rear panel of the player. (Your DVD player will only play DVDs that are labeled with identical region codes.)

Playable Discs



Disc Type	Mark (Logo)	Recorded Signals	Disc Size	Max. Playing Time
DVD-AUDIO DVD-VIDEO		Audio + Video	12cm	Approx. 240 min. (single-sided) Approx. 480 min. (double-sided)
			8cm	Approx. 80 min. (single-sided) Approx. 160 min. (double-sided)
AUDIO-CD		Audio	12cm	74 min.
			8cm	20 min.
Divx		Audio + Video	12cm	74 min.
			8cm	20 min.
Super Audio CD		Audio	12cm	74 min.



Do not use the following types of disc!

- LD, CD-G, CD-I, CD-ROM and DVD-ROM discs cannot be played on this player. If such discs are played, a <WRONG DISC FORMAT> message appears on the TV screen.
- DVD discs purchased abroad may not play on this player. If such discs are played, a <CAN'T PLAY THIS DISC PLEASE, CHECK REGION CODE> message appears on the TV screen.

Copy Protection

- Many DVD discs are encoded with copy protection. Because of this, you should only connect your DVD player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected DVD discs.
- This product incorporates copyright protection technology that is protected by methods claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Disc Recording Format

This product does not support Secure (DRM) Media files.

CD-R Discs

- Some CD-R discs may not be playable depending on the disc recording device (CD-Recorder or PC) and the condition of the disc.
- Use a 650MB/74 minute CD-R disc. Do not use CD-R discs over 700MB/80 minute as they may not be playback.
- Some CD-RW (Rewritable) media, may not be playable.
- Only CD-Rs that are properly "closed" can be fully played. If the session is closed but the disc is left open, you may not be able to fully play the disc.

CD-R MP3 Discs

- Only CD-R discs with MP3 files in ISO 9660 or Joliet format can be played.
- MP3 file names should be 8 characters or less in length and contain no blank spaces or special characters (. / = +).
- Use discs recorded with a compression/decompression data rate greater than 128Kbps.
- Only files with the "mp3" and extensions can be played.
- Only a consecutively written multisession disc can be played. If there is a blank segment in the Multisession disc, the disc can be played only up to the blank segment.
- If the disc is not closed, it will take longer to begin playback and not all of the recorded files may be played.
- For files encoded in Variable Bit Rate (VBR) format, i.e. files encoded in both low bit rate and high bit rate (e.g., 32Kbps ~ 320Kbps), the sound may skip during playback.
- A maximum of 500 tracks can be played per CD.
- A maximum of 300 folders can be played per CD.


CD-R JPEG Discs

- Only files with the "jpg" extensions can be played.
- If the disc is not closed, it will take longer to start playing and not all of the recorded files may be played.
- Only CD-R discs with JPEG files in ISO 9660 or Joliet format can be played.
- JPEG file names should be 8 characters or less in length and contain no blank spaces or special characters (. / = +).
- Only a consecutively written multisession disc can be played. If there is a blank segment in the multisession disc, the disc can be played only up to the blank segment.
- A maximum of 9,999 images can be stored on a single CD.
- When playing a Kodak/Fuji Picture CD, only the JPEG files in the picture folder can be played.
- Picture discs other than Kodak/Fuji Picture CDs may take longer to start playing or may not play at all.


DVD±R/RW, CD-R/RW DivX Discs

- Since this product only provides encoding formats authorized by DivX Networks, Inc., a DivX file created by the user might not play.
- Software updates for incompatible formats are not supported. (Example: QPEL, GMC, resolution higher than 800 x 600 pixels, etc.)
- Sections with a high frame rate might not be played while playing a DivX file.
- For more information about the formats authorized by DivX Networks, Inc., please visit "www.divxnetworks.net".


Main unit

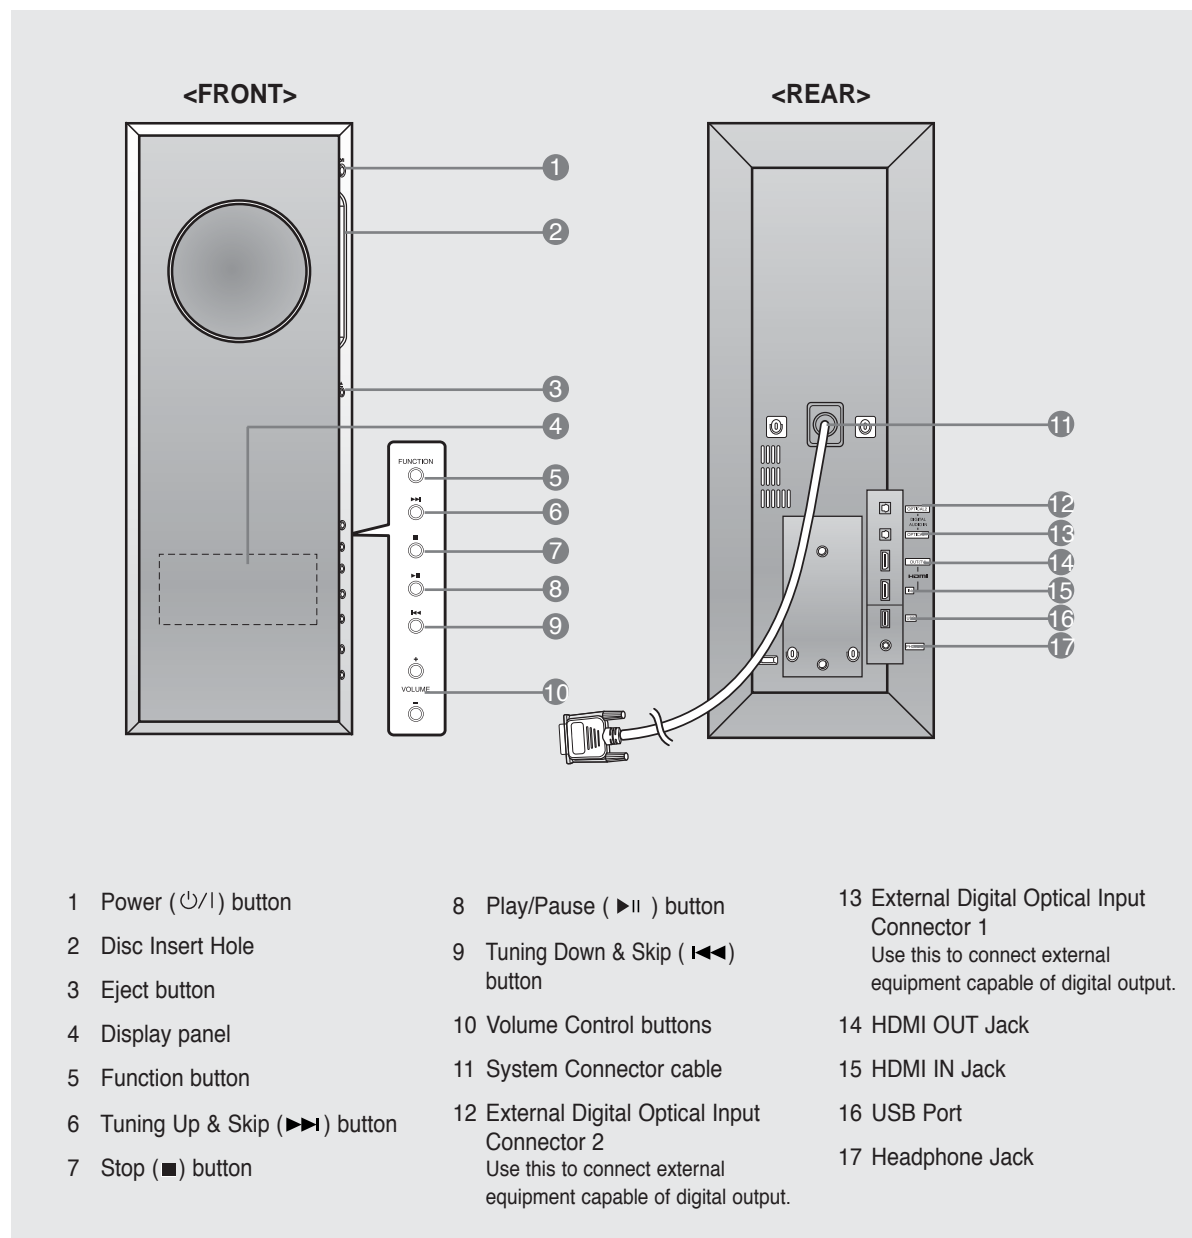


Subwoofer

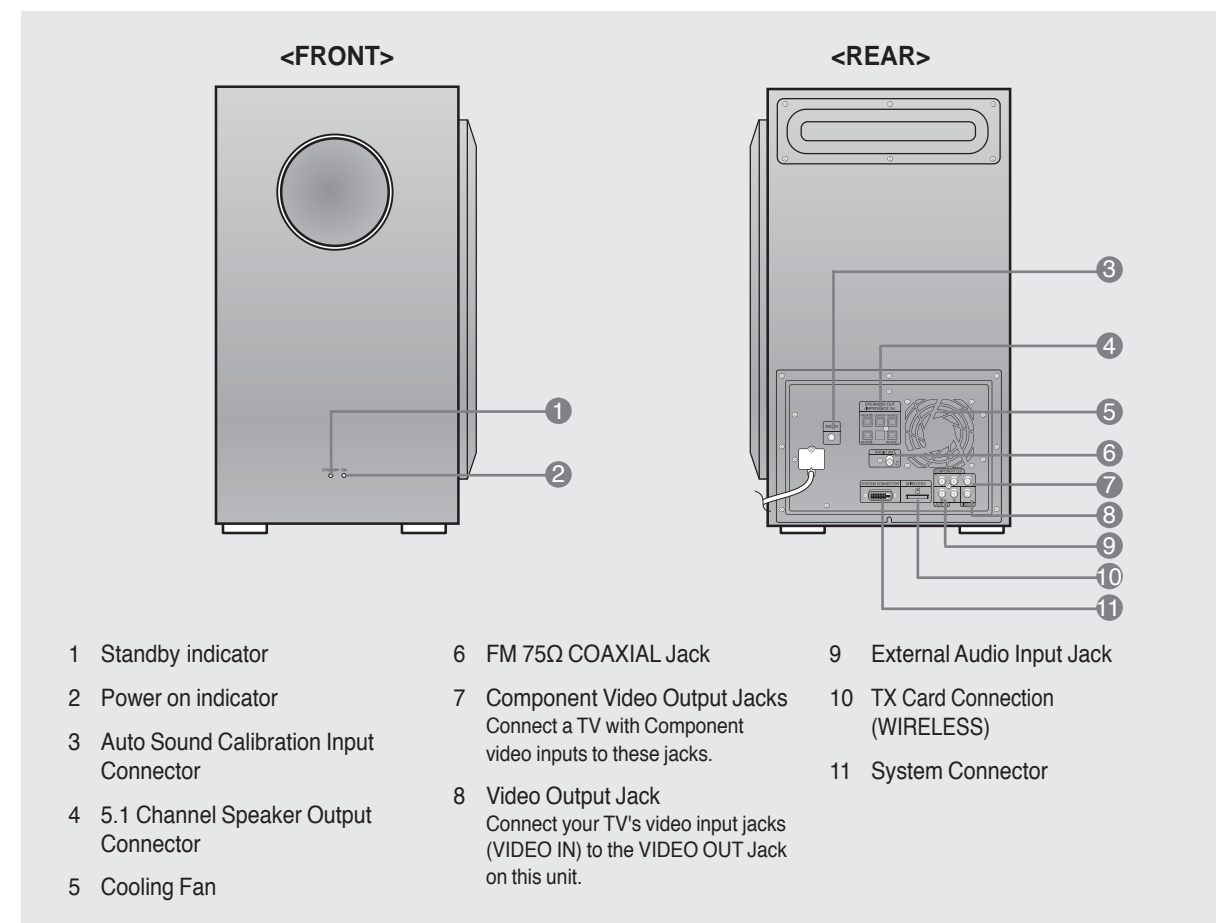

Accessories

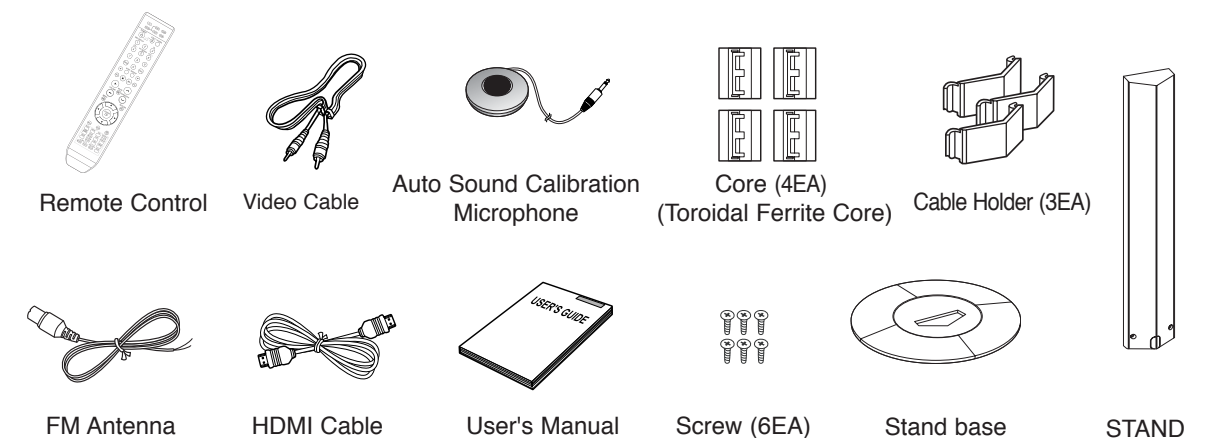


Remote Control

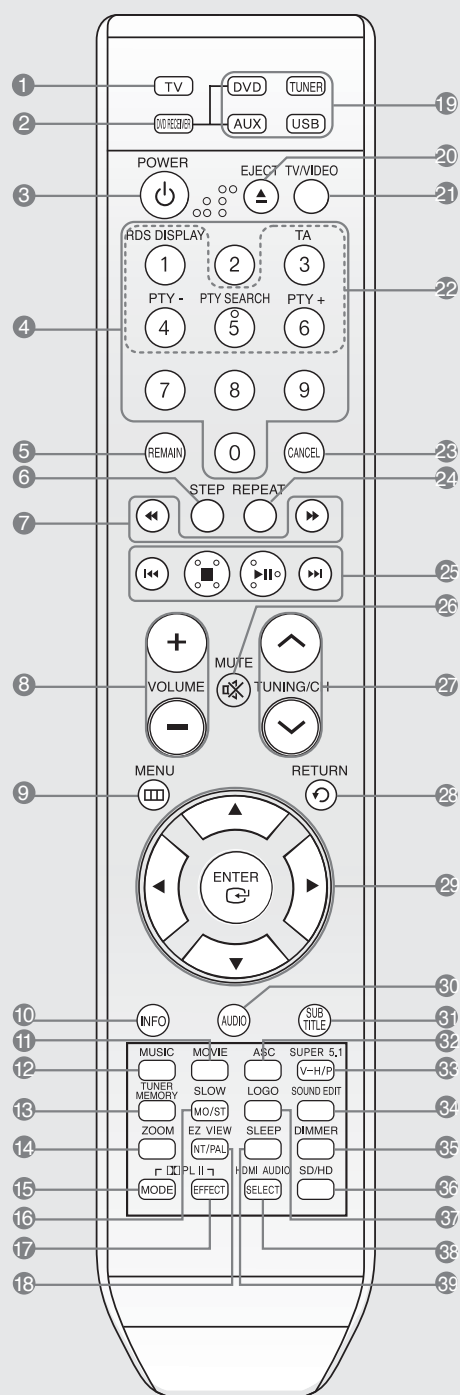

1. TV button
2. DVD RECEIVER button
3. POWER button
4. Number (0~9) buttons
5. REMAIN button
6. STEP button
7. SEARCH buttons
8. VOLUME button
9. MENU button
10. INFO button
11. MOVIE button
12. MUSIC button
13. TUNER MEMORY button
14. ZOOM button
15. PL II MODE button
16. SLOW, MO/ST button
17. PL II EFFECT button
18. EZ VIEW, NT/PAL button
19. DVD button
- AUX button
- TUNER button
- USB button
20. EJECT
21. TV/VIDEO button
22. RDS Selection buttons
23. CANCEL button
24. REPEAT button
25. PLAY/PAUSE button
- STOP button
- Tuning Preset/CD Skip button
26. MUTE button
27. TUNING/CH button
28. RETURN button
29. Cursor/ENTER button
30. AUDIO button
31. SUB TITLE button
32. ASC (Auto Sound Calibration) button
33. SUPER 5.1, V-H/P (Virtual Headphone) button
34. SOUND EDIT button
35. DIMMER button
36. SD(Standard Definition)/HD(High Definition) button
37. LOGO button
38. HDMI AUDIO SELECT button
39. SLEEP

Insert Remote Batteries

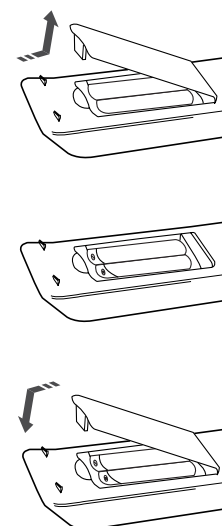

- 1 Remove the battery cover in the direction of the arrow.
- 2 Insert two 1.5V AAA batteries, paying attention to the correct polarities (+ and -).
- 3 Replace the battery cover.




Follow these precautions to avoid leaking or cracking cells:

- Place batteries in the remote control so they match the polarity:(+) to (+)and (-)to (-).
- Use the correct type of batteries.Batteries that look similar may differ in voltage.
- Always replace both batteries at the same time.
- Do not expose the batteries to heat or a flame.


Operation Range of the Remote Control

The remote control can be used up to approximately 23 feet (7 meters) in a straight line. It can also be operated at a horizontal angle of up to 30° from the remote control sensor.

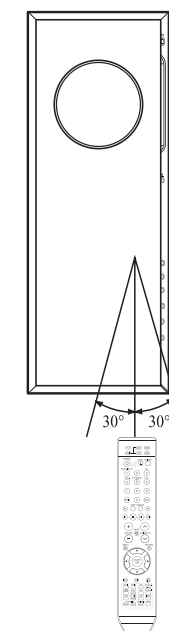

Speaker Installation

How to Install the Speaker and the Stand

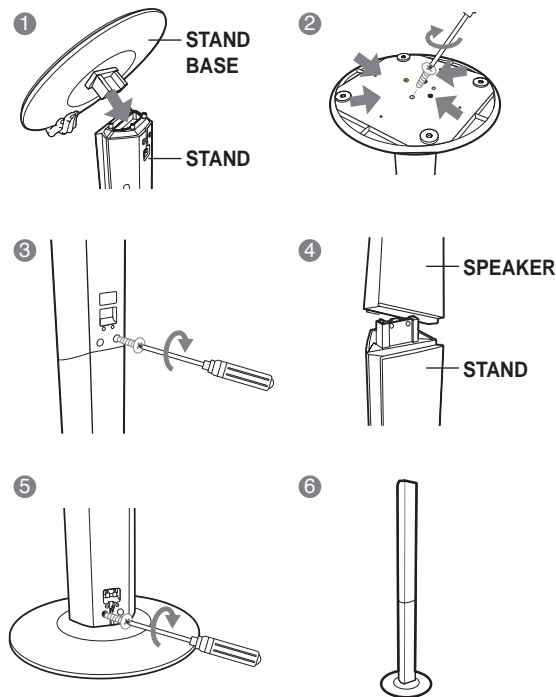


- 1 Turn the stand upside down and mount it on the stand base.
- 2 Tighten 4 screws on the bottom side of the stand base.
- 3 Place the stand on the floor and tighten 2 screws on the back of the stand.
- 4 Mount the speaker on the stand.
- 5 Tighten 2 screws on the back of the speaker.
- 6 This is the successfully assembled speaker.

! • Make sure that the speaker is installed on a flat and stable area. Otherwise it may be easily knocked over.


Speaker Packages

Please confirm that all the following contents are included in the package.

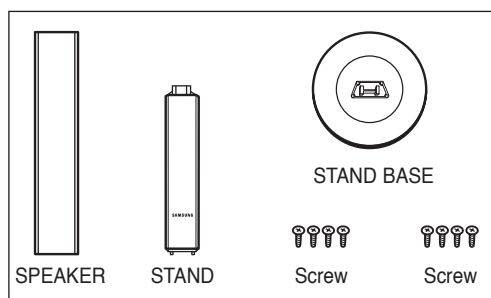

Front/Rear Speaker (4EA)

* Front speakers and rear speakers are packaged separately as shown in the diagram.

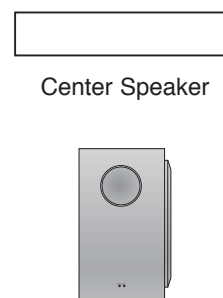

Subwoofer Speaker


Speaker Accessories



Speaker Cable (5EA)

Installing the DVD player

GB

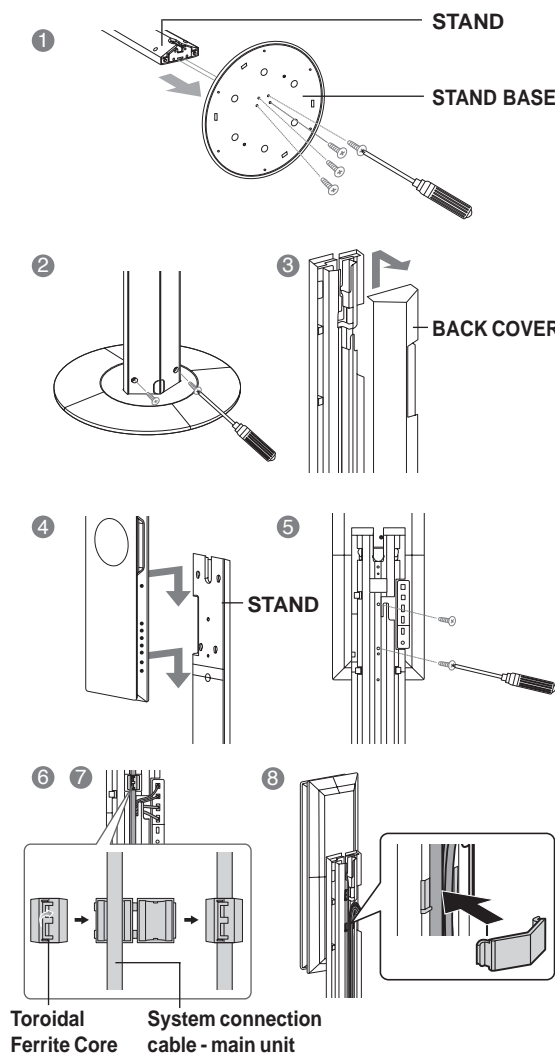


- 1 Mount the stand on the stand base and tighten 4 screws on the bottom side of the stand base.
- 2 Loosen 2 screws at the bottom of the back cover.
- 3 Detach the back cover by lifting it up.
- 4 Secure the main unit by aligning 4 protruding points on the back of the main unit with the fixing holes on the stand.
- 5 Tighten 2 screws in the middle of the stand.
- 6 Open a Toroidal Ferrite Core by pulling it upward. Wrap it around of the system connection cable so it will be next to the DVD Player. Close it back by pressing it all the way down until you hear a clicking sound.
- 7 Push the cable into the cable fixing hole in the stand.
- 8 To fix the cable, insert the cable holder into the hole on the stand.
- 9 Let the cable run through the hole at the bottom of the back cover and close the back cover.
- 10 Tighten 2 screws at the bottom of the back cover.
- 11 Open a Toroidal Ferrite Core by pulling it upward. Wrap it around of the system connection cable so it will be next to the DVD Player. Close it back by pressing it all the way down until you hear a clicking sound.

Toroidal Ferrite Core System connection cable - main unit

! • The Toroidal Ferrite Core is designed to reduce electromagnetic waves that may cause interference.

Stand Packages


Please confirm that all the following contents are included in the package.

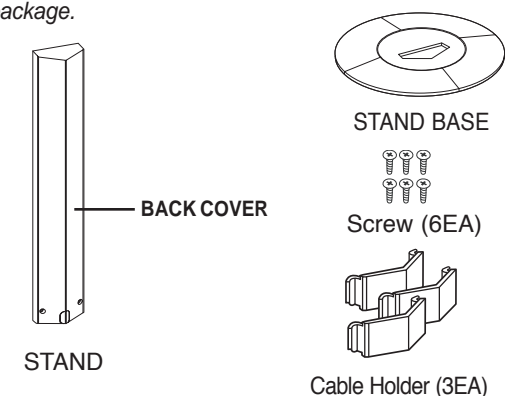

CONNECTIONS

Connecting the Speakers

Before moving or installing the product, be sure to turn off the power and disconnect the power cord.

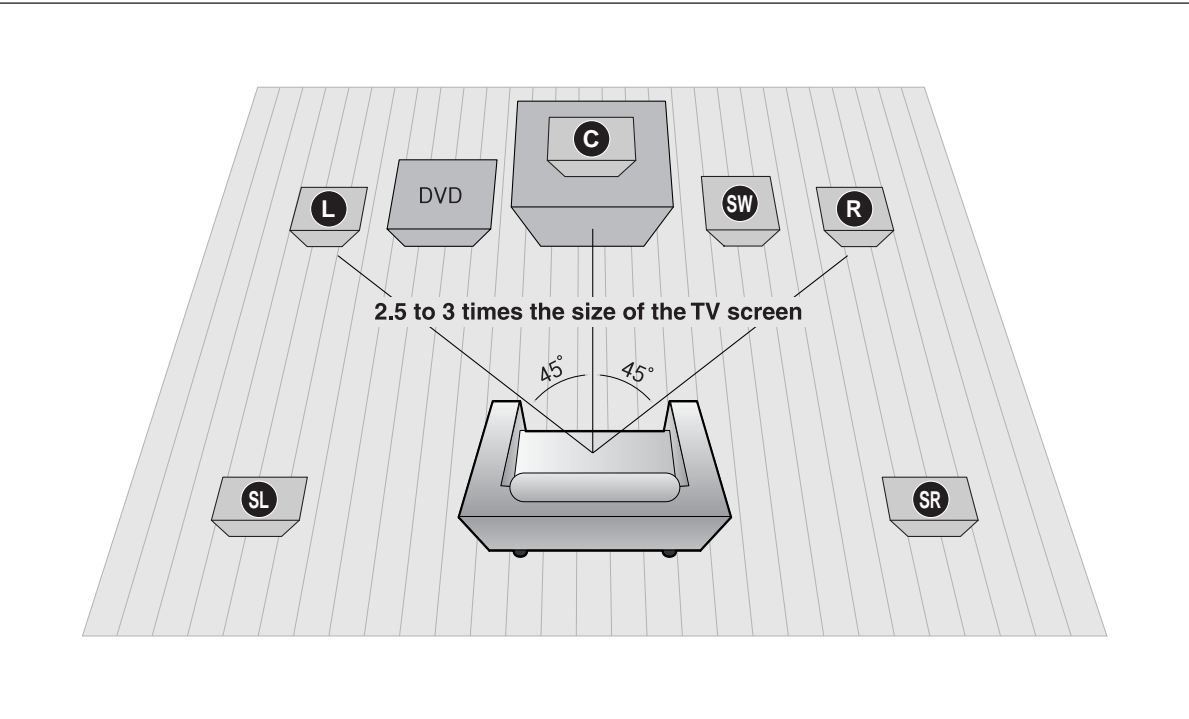

Position of the DVD Player

- Place it on a stand or cabinet shelf, or under the TV stand.

Front Speakers **L R**

- Place these speakers in front of your listening position, facing inwards (about 45°) toward you.
- Place the speakers so that their tweeters will be at the same height as your ear.
- Align the front face of the front speakers with the front face of the center speaker or place them slightly in front of the center speakers.

Center Speaker **C**

- It is best to install it at the same height as the front speakers.
- You can also install it directly over or under the TV.

Selecting the Listening Position


The listening position should be located about 2.5 to 3 times the distance of the TV's screen size away from the TV. Example :
For 32" TVs 2~2.4m (6~8feet)
For 55" TVs 3.5~4m (11~13feet)

Rear Speakers **SL SR**

- Place these speakers behind your listening position.
 - If there isn't enough room, place these speakers so they face each other.
 - Place them about 60 to 90cm (2 to 3feet) above your ear, facing slightly downward.
- ★ Unlike the front and center speakers, the rear speakers are used to handle mainly sound effects and sound will not come from them all the time.


Subwoofer **SW**

- The position of the subwoofer is not so critical. Place it anywhere you like.

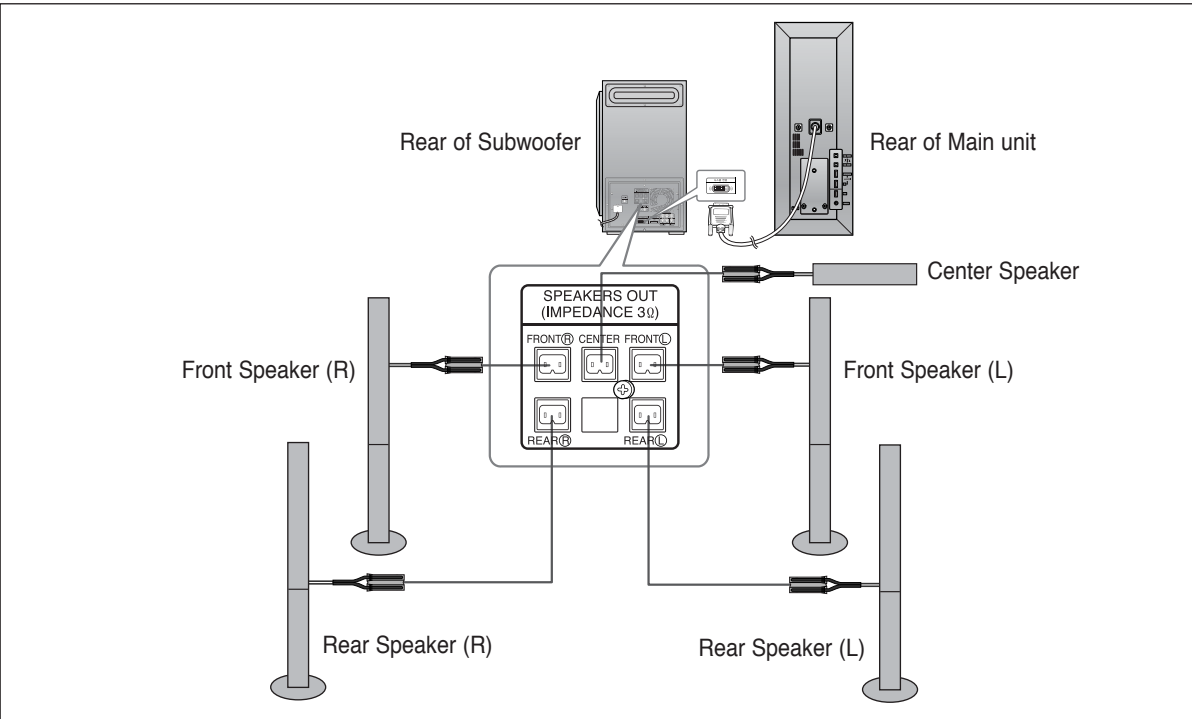


Connecting the Speakers

1

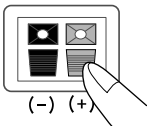

2

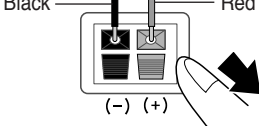

- Press down the terminal tab on the back of the speaker.
- Insert the black wire into the black terminal (-) and the red wire into the red (+) terminal, and then release the tab.
- Connect the connecting plugs to the back of the Subwoofer.
 - Make sure the colors of the speaker terminals match the colors of the connecting plugs.

!


- Do not let children play with or near the speakers. They could get hurt if a speaker falls.
- When connecting the speaker wires to the speakers, make sure that the polarity (+/-) is correct.
- Keep the speaker out of reach of children so as to prevent children from inserting their hands or alien substances into the duct (hole) of the subwoofer speaker.
- Do not hang the subwoofer on the wall through the duct (hole).

✎

- If you place a speaker near your TV set, screen color may be distorted because of the magnetic field generated by the speaker. If this occurs, place the speaker away from your TV set.

Connecting the Speakers (Con't)

Connecting the Main Unit and Subwoofer

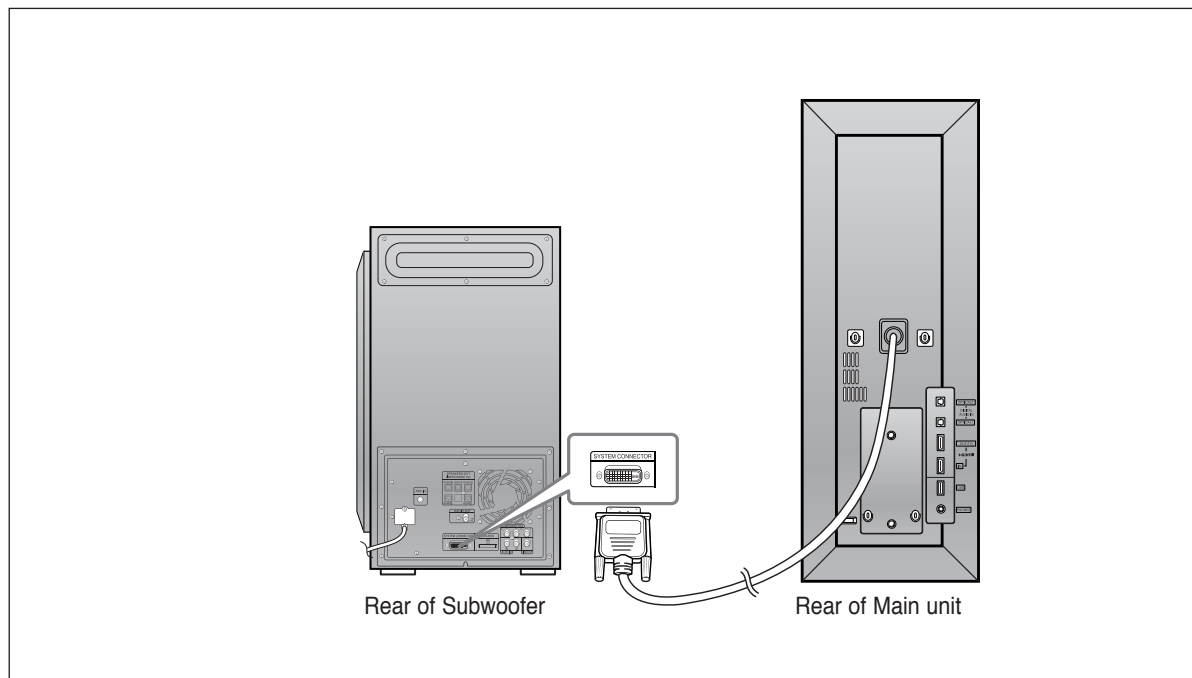


Connect the System Connector cable from the main unit to the System Connector on the Subwoofer.

Subwoofer Functions

Subwoofer : With a built-in, dedicated 185W amplifier, the Subwoofer generates rich bass sounds.

Attaching the Toroidal Ferrite Core to the Power Cord of the Subwoofer

If you attach a Toroidal ferrite core to the power cord of the subwoofer, it will prevent help to prevent RF interference from radio signals.

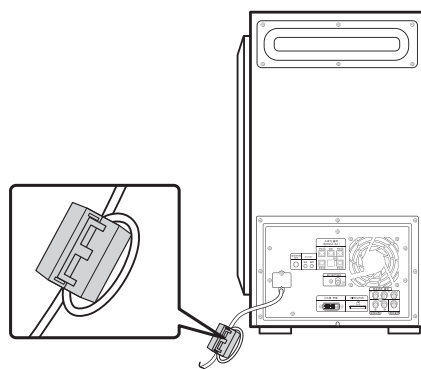



- 1 Pull the fixing tab of the Toroidal ferrite core to open it.
- 2 Make a loop in the subwoofer power cord.
- 3 Attach the Toroidal ferrite core to the subwoofer power cord as the figure shows and press it until it clicks.

Connecting the Optional Wireless Receiving Amplifier


GB

To connect the rear speakers wirelessly, you have to purchase the wireless receiving module and TX card from your Samsung retailer.

When you have Purchased the Wireless Receiving Module (SWA-3000)

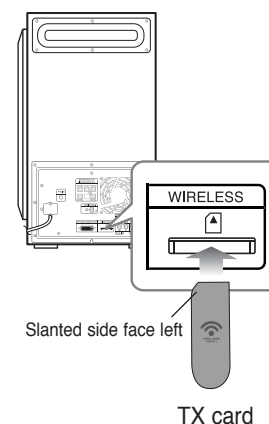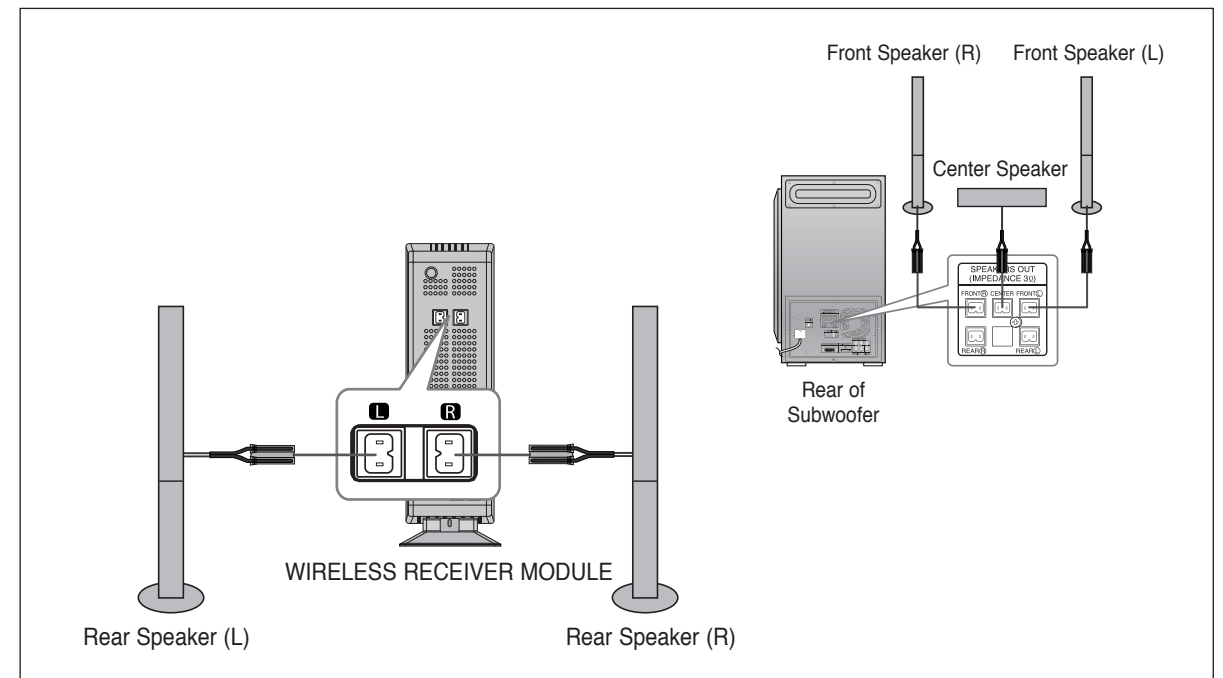

- 1 Connect the front and center speakers to the Subwoofer, referring to pages 15~16.
- 2 With the subwoofer turned off, insert the TX card into the TX Card Connection(WIRELESS) on the back of the subwoofer.
 - Hold the TX card so that the slanted side faces leftward and insert the card into the port.
 - The TX card enables communication between the subwoofer and the wireless receiver.
- 3 Connect the left and right rear speakers to the wireless receiving module.
- 4 Plug the power cord of the wireless receiving module in the wall outlet and switch the power switch <ON>.

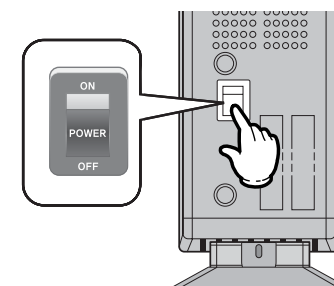


- ! Do not insert a card other than the TX card dedicated for the product. The product might be damaged or the card may not be removed easily.
- Do not insert the TX card upside down or in the reverse direction.
- If the TX Card is inserted, sound is not output from the Rear Speaker connectors on the subwoofer.

Connecting the Optional Wireless Receiving Amplifier (Con't)

Resetting the Wireless Receiving Module

Reset the system if a communication failure occurs, or if the Link indicator (blue LED) on the wireless receiver does not light up and the "REAR CHECK" message blinks on the main unit's display.

Reset the system while the main unit and the wireless receiver module (SWA-3000) are in Power Standby mode.

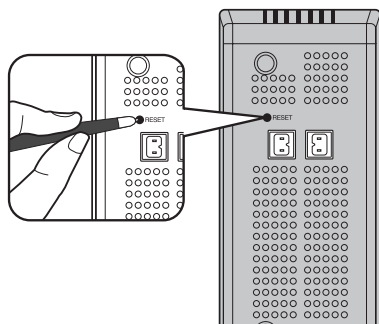

- 1 With the main unit turned off, press and hold the remote control's **REMAIN** button for 5 seconds.
 - The STANDBY LED on the front panel of the wireless receiver module blinks.
- 2 With the wireless receiver module turned on, use a ball point pen or a toothpick to press the **RESET** button on the back of the unit.
 - The STANDBY LED on the front panel of the wireless receiver module blinks 2 Times.
- 3 Turn on the main unit.
 - The LINK LED of the wireless receiver module is lit and the Reset is completed.
 - If Power Standby mode continues, repeat Steps 1 to 3 above.




- When the wireless receiving module setting is complete, no audio signal is output from the Rear Speaker Output Connector on the back of the subwoofer.
- The wireless receiving antenna is built into the wireless receiver module. Keep the unit away from water and moisture.
- For optimal listening performance, make sure that the area around the wireless receiver module location is clear of any obstructions.
- Sound will be heard from the wireless rear speakers in DVD 5.1-CH or Dolby Pro Logic II mode only.
- In 2-CH mode, no sound will be heard from the wireless rear speakers.



- Place the wireless receiver module at the rear of the listening position. If the wireless receiver module is too close to the main unit, some sound interruption may be heard due to interference.
- If you use a device such as a microwave oven, wireless LAN Card, Bluetooth equipment, or any other device that uses the same frequency (2.4GHz) near the system, some sound interruption may be heard due to interference.
- The transmission distance of a radio wave is about 10m, but may vary depending on your operating environment. If a steel-concrete wall or metallic wall is between the main unit and the wireless receiver module, the system may not operate at all, because the radio wave cannot penetrate metal.

Connecting the Video Out to your TV

Choose one of the three methods for connecting to a TV.

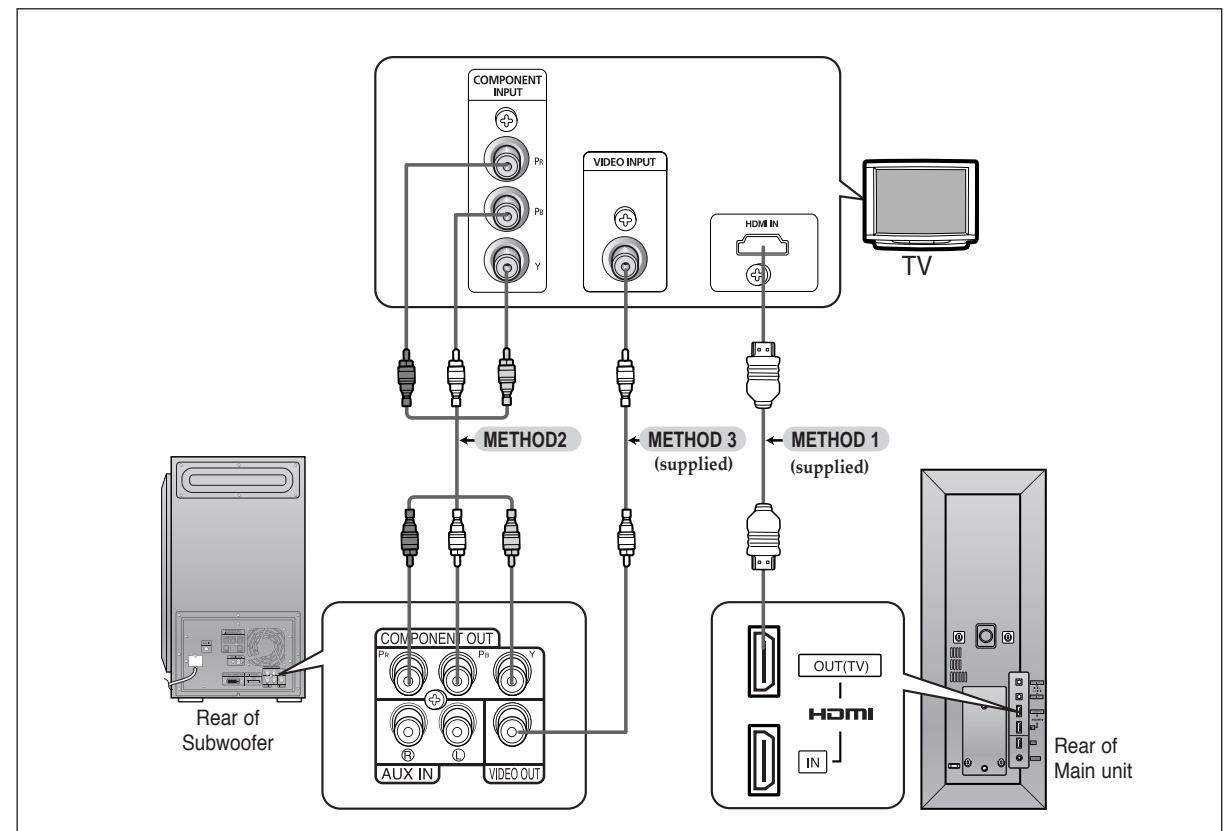

METHOD 1 : HDMI (Best Quality)

Connect the supplied HDMI cable from the HDMI OUT jack on the back of the Main Unit to the HDMI IN jack on your TV.

METHOD 2 : Component (Better Quality)

If your television is equipped with Component Video inputs, connect a component video cable(not supplied) from the Component Video Output (PR, PB and Y) Connectors on the back of the subwoofer to the Component Video Input Connectors on your TV.

METHOD 3 : Composite Video (Good Quality)


Connect the supplied video cable from the VIDEO OUT jack on the back of the subwoofer to the VIDEO IN jack on your TV.



- This product operates in Interlace scan mode (576i, 480i) for component output.

Connecting the HDMI IN/OUT

HDMI (High-Definition Multimedia Interface) is a digital interface that enables transmitting digital video and audio over a single cable. In addition, it enables you to enjoy multi-channel digital audio.

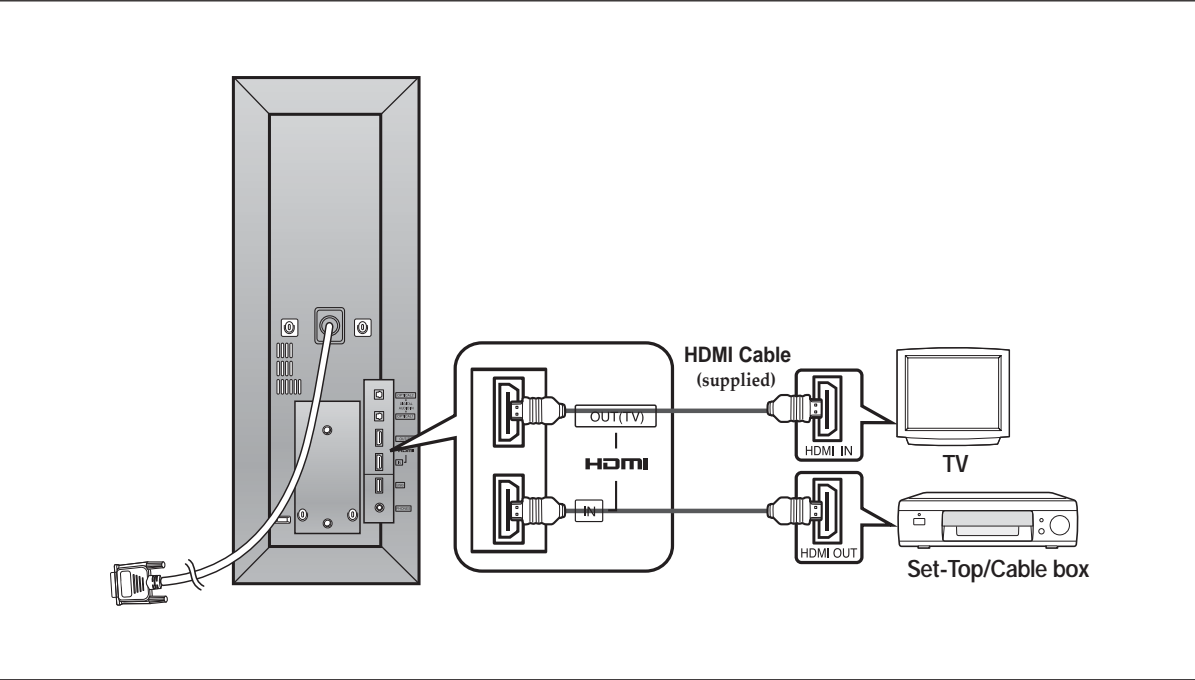

- 1 Connect the HDMI IN Jack of this unit to the HDMI OUT Jack of your Set-Top/Cable box.
- 2 Connect the HDMI OUT Jack of this unit to the HDMI IN Jack of your TV.
- 3 Press the **AUX** button on the remote control to select <HDMI>.
 - You can also use the **FUNCTION** button on the main unit.
The mode switches as follows : <DVD> → <USB> → <HDMI> → <D.IN 1> → <D.IN 2> → <AUX> → <FM>.

- Audio from SACD discs cannot be heard via the HDMI connection. To play a DVD disk whose copyright is protected by CPPM, use a player supporting CPPM.
- The quality of the audio output through the HDMI OUT Jack (sampling frequency and bit rate) may be limited by the performance of the external device.
- Since HDMI connection supports both video and audio, you don't have to connect an audio cable.
- When this unit is turned off, no HDMI video or audio signal is output through this unit from a set-top box.
- When a Cable Box/Satellite Receiver is connected to HDMI IN, the SD/HD(Standard Definition/High Definition) button on the Remote control does not work.
- When the output from an external device is connected via DVI/HDMI to this unit, no audio will be output. In this case, you can listen to digital audio by connecting the Optical OUT of the source device (Set-Top Box) to the Optical IN 1 or 2 of this unit.

High-bandwidth Digital Content Protection System (HDCP) support


To play digital content through the HDMI connection, both the connected external device and TV must support High-bandwidth Digital Content Protection System (HDCP). This product supports HDCP.

COMPATIBILITY WITH A TV SUPPORTING HDMI	
A TV with an HDMI jack.	Video/Audio
A TV with an DVI-D jack (TV that supports HDCP)	Video
A TV with an DVI-D jack (TV that does not support HDCP)	-

HDMI Function

HDMI Audio ON/OFF function

The audio signals transmitted over the HDMI Cable can be toggled ON/OFF.

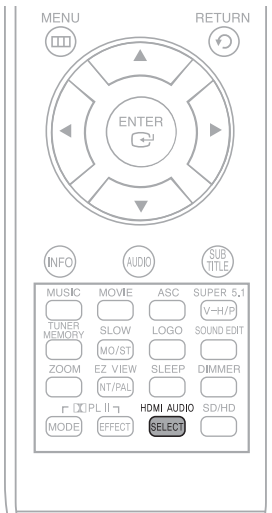


- Press the **HDMI AUDIO SELECT** button on the remote control.
- This toggles between <ON> and <OFF> on the display.
-
- ON : Both video and audio signals are transmitted over the HDMI connection cable, and audio is output through your TV speakers only.
 - OFF : Video is transmitted over the HDMI connection cable only, and audio is output through the home theater speakers only.
-
- The default setting of this product is HDMI AUDIO OFF.
 - HDMI AUDIO is automatically down-mixed to 2ch for TV speakers.
 - The HDMI AUDIO is not available when using the HDMI IN function.

What is HDMI (High Definition Multimedia Interface)?
This device transmits a DVD video signal digitally without the process of converting to analog. You will get sharper digital pictures when using an HDMI connection.


Resolution Selection

This function allows the user to select the screen resolution for HDMI output.

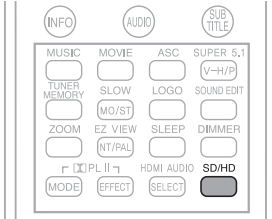

- In Stop mode, press and hold the **SD/HD** button on the remote control.
- Resolutions available for the HDMI output are 576P(480p), 720p,1080i and 1080p.
 - SD(Standard Definition) resolution is 576P(480p) and HD(High Definition) resolution is 720p/1080i/1080p.
-
- If the TV does not support the configured resolution, you will not be able to see the picture properly.
 - See your TV owner's manual for more information on how to select the TV's Video Input source.

Connecting Audio from External Components

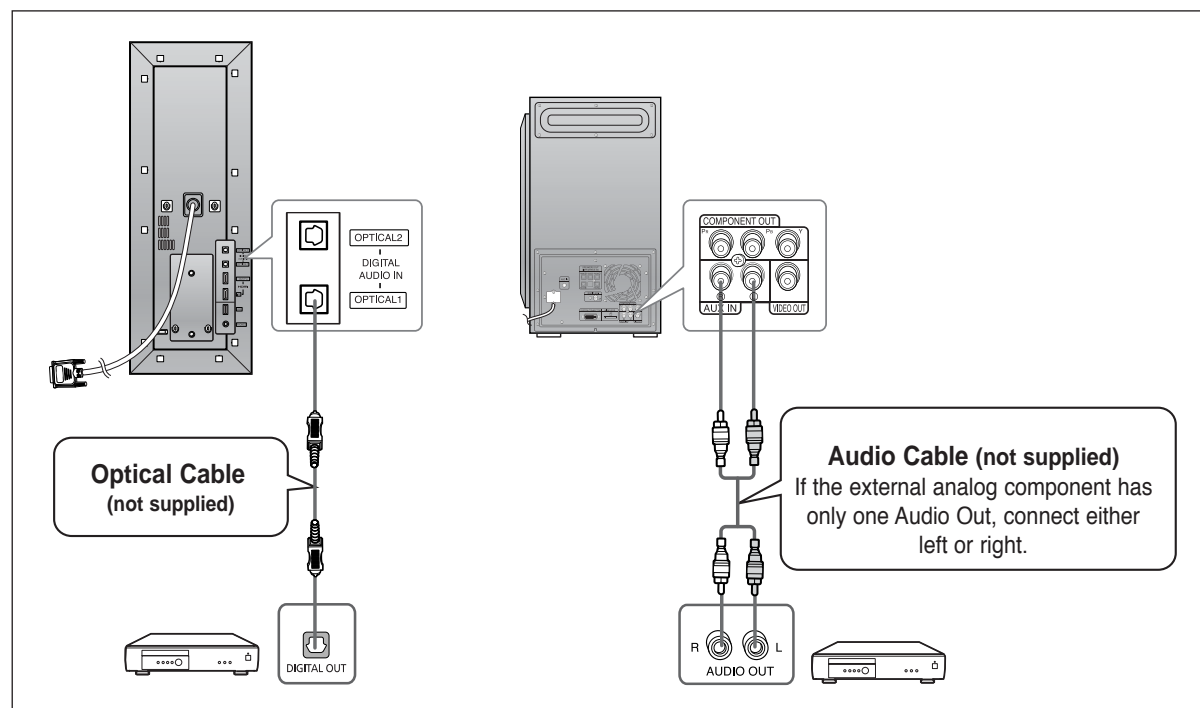

Connecting an External Digital Component

Digital signal components such as a Set-Top/Cable Box.

- 1 Connect the Digital Input (OPTICAL 1 or 2) on the Home Theater to the Digital Output of the external digital component.
- 2 Press the **AUX** button on the remote control to select <D.IN1> <D.IN2> input.
 - You can also use the **FUNCTION** button on the main unit.
The mode switches as follows : <DVD> → <USB> → <HDMI> → <D.IN 1> → <D.IN 2> → <AUX> → <FM>.

Connecting an External Analog Component


Analog signal components such as a VCR.

- 1 Connect the AUX (Audio) In on the subwoofer to the Audio Out of the external analog component.
 - Be sure to match connector colors.
- 2 Press the **AUX** button on the remote control to select <AUX> input.
 - You can also use the **FUNCTION** button on the main unit.
The mode switches as follows : <DVD> → <USB> → <HDMI> → <D.IN 1> → <D.IN 2> → <AUX> → <FM>.



- To listen to the audio from the TV in 5.1 channel through the Home Theater, press the Dolby Pro Logic II or the SUPER 5.1 button.
- You can connect the Video Output jack of your VCR to the TV, and connect the Audio Output jacks of the VCR to this product.

Connecting the FM Antenna

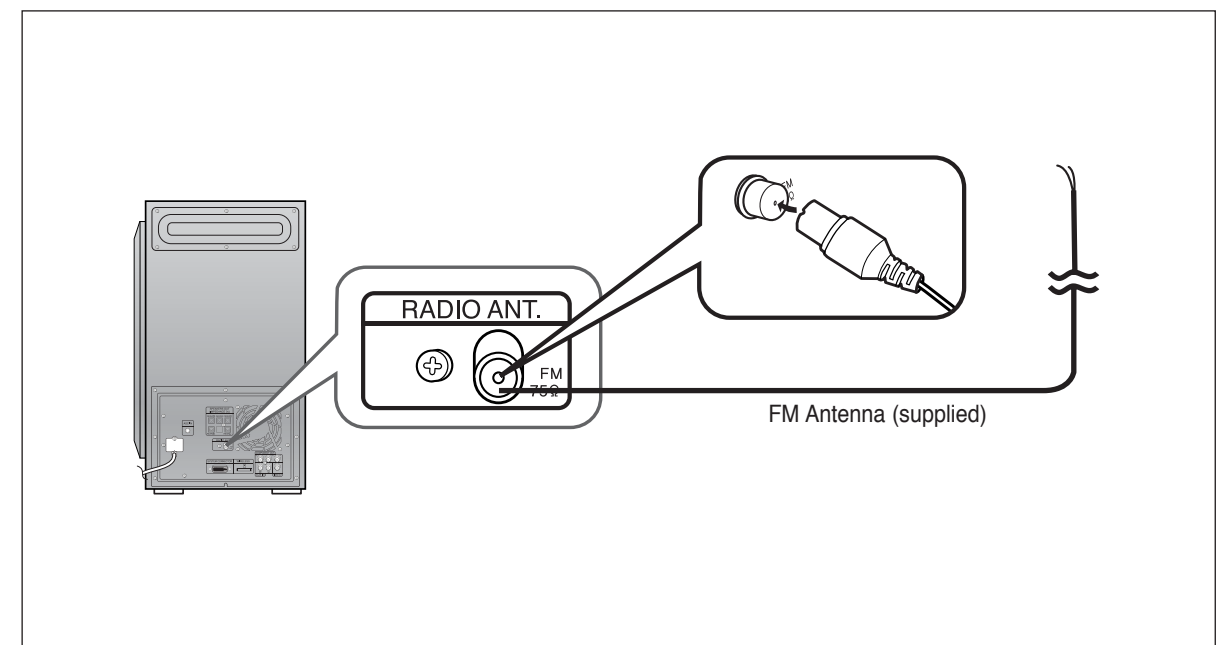


- 1 Connect the FM antenna supplied to the FM 75Ω COAXIAL Jack.
- 2 Slowly move the antenna wire around until you find a location where reception is good, then fasten it to a wall or other rigid surface.



- This unit does not receive AM broadcasts.

Cooling Fan

The cooling fan supplies cool air to the subwoofer to prevent overheating.

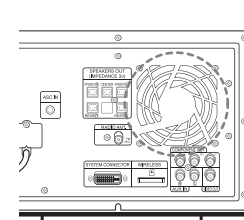









Please observe the following cautions for your safety.


- Make sure the unit is well-ventilated. If the unit has poor ventilation, the temperature inside the unit may rise and may damage it.
- Do not obstruct the cooling fan or ventilation holes. (If the cooling fan or ventilation holes are covered with a newspaper or cloth, heat may build up inside the unit and fire may result.)

Before Reading the User's Manual

Make sure to check the following terms before reading the user manual.

Icons that will be used in manual

Icon	Term	Definition
	DVD	This involves a function available with DVD or DVD-R/DVD-RW discs that have been recorded and finalized in Video Mode.
	Super Audio CD	This involves a function available with a Super Audio CD (Single Layer, Dual Layer, Hybrid Layer).
	CD	This involves a function available with a data CD (CD-R or CD-RW).
	MP3	This involves a function available with CD-R/-RW discs.
	DivX	This involves a function available with MPEG4 discs. (DVD±R/RW, CD-R or CD-RW)
	JPEG	This involves a function available with CD-R/-RW discs.
	CAUTION	This involves a case where a function does not operate or settings may be cancelled.
	NOTE	This involves tips or instructions on the page that help each function operate.


- In this manual, the instructions marked with "DVD ()" are applicable to DVD-VIDEO, DVD-AUDIO, and DVD-R/-RW discs that have been recorded in Video Mode and then finalized. Where a particular DVD type is mentioned, it is indicated separately.
- If a DVD-R/-RW disc has not been recorded properly in DVD Video format, it will not be playable.

Before Using Your Home Theater

GB


To Operate your Samsung TV and the Home Theater with the HT-TXQ120's Remote Control

The DVD Home Theater's remote can be used to control Samsung TVs.

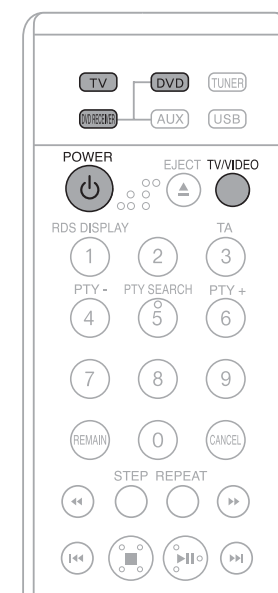


- 1 Plug the subwoofer's power cord into the AC power supply.
 - Before plugging your system into a main socket, you must check the voltage setting (OPTIONAL). If the voltage of the socket does not correspond to the setting on the rear of the unit, you may seriously damage your system.
- 2 Press the **TV** button to set the remote to TV mode.
- 3 Press the **POWER** button to turn on your Samsung TV with this remote.
- 4 Press the **TV/VIDEO** button to select VIDEO mode on your TV.
- 5 Press the **DVD RECEIVER** button to switch to DVD RECEIVER mode to operate the DVD Home Theater.
- 6 Press the **FUNCTION** button on the main unit or **DVD** button on the remote to enable DVD/CD playback.

Selecting the Video Format

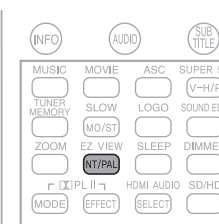


- Press and hold the **NT/PAL** button on the remote controller for over 5 seconds while the power is turned off.
- By default, the video format is set to <PAL>.
 - <NTSC> or <PAL> will appear in the display. At this time, press the **NT/PAL** button shortly to select between <NTSC> and <PAL>.
 - Each country has a different video format standard.
 - For normal playback, the video format of the disc must be the same as the video format of your TV.

Disc Playback

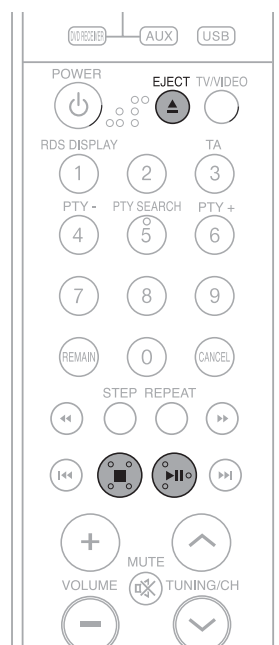

- 1 Load a disc vertically into the Disc Insert Hole.
 - Insert a disc so that the label side facing forward.
 - Playback starts automatically.
- 2 To eject the disc, press the **EJECT** button.

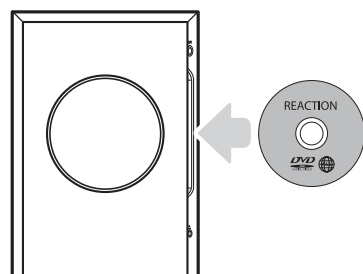

- To stop playback, press the **STOP** button during playback.
 - If pressed once, <PRESS PLAY> is displayed and the stop position will be stored in memory. If the **PLAY/PAUSE** (▶||) button or **ENTER** button is pressed, playback resumes from the stop position. (This function works only with DVDs.)
 - If pressed twice, <STOP> is displayed, and if the **PLAY/PAUSE** (▶||) button is pressed, playback starts from the beginning.
- To temporarily pause playback, press the **PLAY/PAUSE** (▶||) button during playback.
 - To resume playback, press the **PLAY/PAUSE** (▶||) button again.

- Depending on the content of the disc, the initial screen may appear different.
- Pirated discs will not run in this player because it violates the CSS (Content Scrambling System : a copy protection system) recommendations.

SACD (Super Audio CD) Playback



You can listen to high quality multi-channel sound that exceeds regular CD playback.



- 1 Load the SACD disc.
 - The SACD menu appears and playback will start.
- 2 When the play is stopped, select a track using the Cursor ▲, ▼ button and press the **ENTER** button.
 - During the play, you cannot select a track using the Cursor ▲, ▼ button.
- 3 Press the **STOP** (■) button to stop playback.



Disc Spec


Item	CD	SACD	DVD Audio
Number of Channels and Play Time	2 Channels : 70 Minutes	2 Channels : 110 Minutes 5.1 Channels : 81 Minutes	2 Channels : 120 Minutes 5.1 Channels : 89 Minutes
Sampling Frequency	44.1 KHz	2822.4 KHz (64 Times of CD)	44.1~192 KHz (4.4 Times of CD)
Dynamic Range	96 dB	120 dB	144 dB
Play Frequency	~20 KHz	~100 KHz	~96 KHz

- SACD has three kinds of formats: Single Layer Disc that has 1 HD layer, Dual Layer Disc that has 2 HD layers and Hybrid Disc that has both CD and HD layers. Hybrid Discs can play in regular CD players.


MP3/WMA-CD Playback



Data CDs (CD-R, CD-RW) encoded in MP3/WMA format can be played.

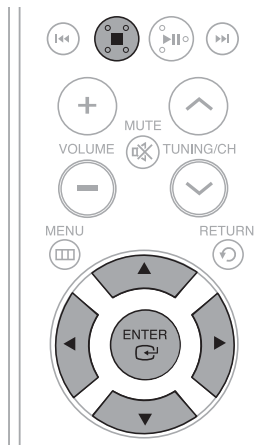


- 1 Load the MP3/WMA disc.
 - The MP3/WMA menu screen will appear and playback will start.
 - The appearance of the menu depends on the MP3/WMA disc.
 - WMA-DRM files cannot be played.
- 2 In Stop mode, use the Cursor ▲, ▼, ◀, ▶ button to select the album, and then press the **ENTER** button.
 - Use the Cursor ▲, ▼ button to select the track.
- 3 To change the album, use the Cursor ▲, ▼, ◀, ▶ button to select another album in Stop mode, and then press the **ENTER** button.
 - To select another album and track, repeat Steps 2 and 3 above.
- 4 Press the **STOP** button to stop playback.

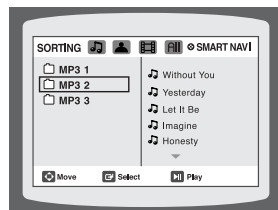

- Depending on the recording mode, some MP3/WMA-CDs may not play.
- Table of contents of a MP3-CD varies depending on the MP3/WMA track format recorded on the disc.

- To play a file icon in the screen,
Press the Cursor ▲, ▼, ◀, ▶ button when it is in Stop mode and select a desired icon from the top part of the menu.

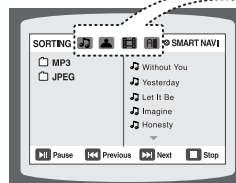

- 🎵 Music File Icon : To play music files only, select the 🎵 Icon.
- 👤 Image File Icon : To view image files only, select the 👤 Icon.
- 🎬 Movie File Icon : To view movie files only, select the 🎬 Icon.
- 📁 All File Icon : To view movie files only, select the 📁 Icon.

JPEG File Playback




Images captured with a digital camera or camcorder, or JPEG files on a PC can be stored on a CD and then played back with this Home Theater.




- Load the JPEG disc.
- Playback starts automatically. Each image is displayed for 5 seconds and then the next image is displayed.
- Press the ◀◀▶▶ button to skip to the next slide.
- Each time the button is pressed, the slide moves backward or forward.

Rotate/Flip Function

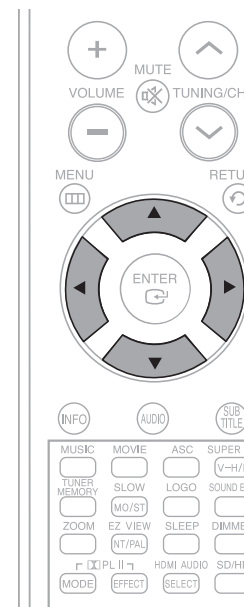


Press the Cursor ▲, ▼, ◀, ▶ button during playback.

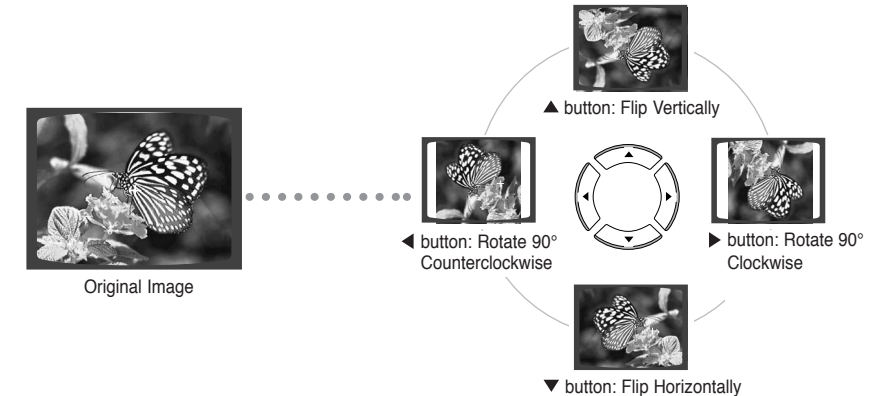

- The maximum resolutions supported by this product are 5120 x 3480 (or 19.0 MPixel) for standard JPEG files and 2048 x 1536 (or 3.0 MPixel) for progressive image files.

The functions on this page apply to DivX disc playback.

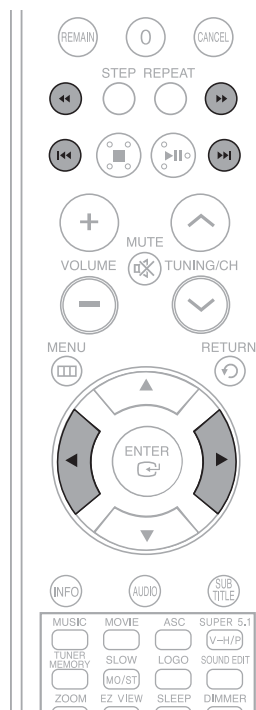

Skip Forward/Back

During playback, press the **⏮, ⏭** button.

- Goes to the next file whenever you press the **⏭** button, if there are over 2 files in the disk.
- Goes to the previous file whenever you press the **⏮** button, if there are over 2 files in the disk.

Fast Playback

To play back the disc at a faster speed, press the **⏮** or **⏭** button during playback.

- Each time you press either button, the playback speed will change as follows:
2x → 4x → 8x → 32x → Normal.

5 Minute Skip function

During playback, press the Cursor **◀, ▶** button.

- Playback skips 5 minutes forward whenever you press the Cursor **▶** button.
- Playback skips 5 minutes back whenever you press the Cursor **◀** button.

Zoom Function

1 Press the **ZOOM** button.

- Each time you press the button, your selection will toggle between <ZOOM X2> and <ZOOM OFF>.

2 Press the Cursor **▲, ▼, ◀, ▶** button to move to the area you want to enlarge.


- DivX file can be zoomed only in ZOOM X2 mode.
- DivX files have .Avi file extensions, however, not all .Avi files are DivX and may not be playable in this unit.

Audio Display

Press the **AUDIO** button.

- If there are multiple audio tracks on a disc, you can toggle between them.
- Each time you press the button, your selection will toggle between <AUDIO (1/N, 2/N ...)> and


- is displayed when there is one supported language in the disc.

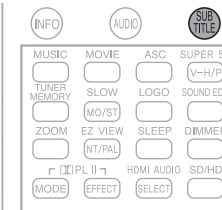

Subtitle Display

Press the **SUBTITLE** button.

- Each time you press the button, your selection will toggle between <SUBTITLE (1/N, 2/N ...)> and <SUBTITLE OFF>.
- If the disc has only one subtitle file, it will be played automatically.
- See number 2 (Caption Function) below for more details concerning Subtitle usage with DivX discs.

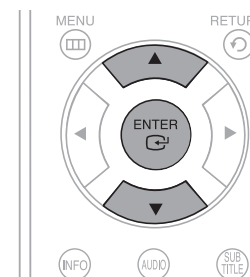

If the disc has more than one subtitle file

If the disc has more than one subtitle file, the default subtitle may not match the movie and you will have to select your subtitle language as follows:

- 1 In Stop mode, press the Cursor **▲, ▼** button, select the desired subtitle () from the TV screen, and then press the **ENTER** button.
- 2 When you select the desired DivX file from the TV screen, the movie will be played normally.

DivX(Digital internet video eXpress)

DivX is a video file format developed by Microsoft and is based on MPEG4 compression technology to provide audio and video data over the Internet in real-time.

MPEG4 is used for video encoding and MP3 for audio encoding so that the users can watch a movie at near DVD-quality video and audio.

1. Supported Formats

This product only supports the following media formats. If both video and audio formats are not supported, the user may experience problems such as broken images or no sound.

Supported Video Formats

Format	AVI	WMV
Supported Versions	DivX3.11~DivX5.1, XviD	V1/V2/V3/V7

Supported Audio Formats

Format	MP3	WMA	AC3	DTS
Bit Rate	80~384kbps	56~128kbps	128~384kbps	1.5Mbps
Sampling Frequency	44.1khz		44.1/48khz	44.1khz

- DivX files, including audio and video files, created in the DTS format can only support up to 6Mbps.
- Aspect Ratio: Although default DivX resolution is 640x480 pixels (4:3), this product supports up to 720x480 pixels (16:9). TV screen resolutions higher than 800 will not be supported.
- When you play a disc whose sampling frequency is higher than 48khz or 320kbps, you may experience shaking on the screen during playback.

2. Caption Function

- You must have some experience with video extraction and editing in order to use this feature properly.
- To use the caption function, save the caption file (*.smi) in the same file name as that of the DivX media file (*.avi) within the same folder.

Example. Root Samsung_007CD1.avi
Samsung_007CD1.smi

- Up to 60 alphanumeric characters or 30 East Asian characters (2 byte characters such as Korean and Chinese) for the file name.



Displaying Disc Information




You can view disc playback information on the TV screen.

Press the **INFO** button.


- Each time the button is pressed, the display changes as follows:


The information Display disappears from the screen



The information Display disappears from the screen



The information Display disappears from the screen

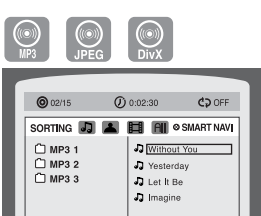

The information Display disappears from the screen

appears on the TV screen!

If this symbol appears on the TV screen when pressing a button, that operation is not possible with the disc currently being played.

• Depending on the disc, the disc information display may appear different.

• Depending on the disc, you can also select DTS, DOLBY DIGITAL, or PRO LOGIC.

Screen Display

DVD DVD display	TITLE display	ELAPSED TIME display	LR STEREO (L/R) display
CD CD display	CHAPTER display	REPEAT PLAYBACK display	MCH MCH 2CH/Multi CH display
DVD AUDIO DVD-AUDIO display	TRACK (FILE) display	AUDIO LANGUAGE display	DOLBY DIGITAL display
SACD SACD display	GROUP display	SUBTITLE display	ANGLE display

Checking the Remaining Time



Press the **REMAIN** button.

- For checking the total and remaining time of a title or chapter being played.

Each time the Remain button is pressed

	TITLE ELAPSED → TITLE REMAIN → CHAPTER ELAPSED → CHAPTER REMAIN
	GROUP ELAPSED → GROUP REMAIN → TRACK ELAPSED → TRACK REMAIN
	TRACK ELAPSED → TRACK REMAIN → TOTAL ELAPSED → TOTAL REMAIN
	TRACK REMAIN → TRACK ELAPSED

Fast Playback



Press the **◀▶▶▶** button.

- Each time the button is pressed during playback, the playback speed changes as follows:

	◀▶▶▶ 2X → ◀▶▶▶ 4X → ◀▶▶▶ 8X → ◀▶▶▶ 32X → ▶▶▶▶ PLAY
	▶▶▶▶ 2X → ▶▶▶▶ 4X → ▶▶▶▶ 8X → ▶▶▶▶ 32X → ▶▶▶▶ PLAY

- During fast playback of a SACD, CD or MP3-CD, sound is heard only at 2x speed, and not at 4x, 8x, and 32x speeds.

Slow Playback



Press the **SLOW** button.

- Each time the button is pressed during playback, the playback speed changes as follows:

	▶▶▶▶ 1/2 → ▶▶▶▶ 1/4 → ▶▶▶▶ 1/8 → ◀▶▶▶ 1/2 → ◀▶▶▶ 1/4 → ◀▶▶▶ 1/8 → ▶▶▶▶ PLAY
	▶▶▶▶ 1/2 → ▶▶▶▶ 1/4 → ▶▶▶▶ 1/8 → ▶▶▶▶ PLAY


- No sound is heard during slow playback.
- Reverse slow playback does not work with DivX.

Skipping Scenes/Songs



Press the **◀◀▶▶** button.

- Each time the button is pressed during playback, the previous or next chapter, track or directory (file) will be played.
- You cannot skip chapters consecutively.

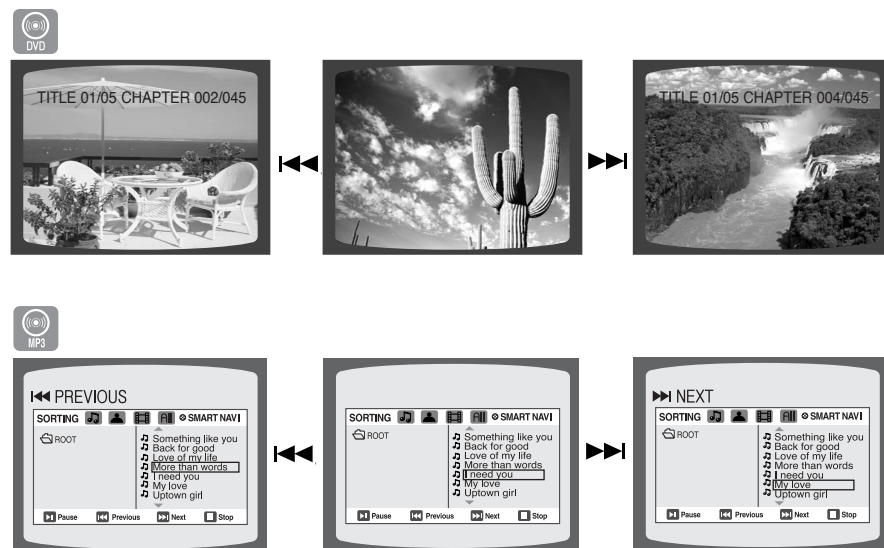

Repeat Playback



Repeat playback allows you to repeatedly play a chapter, title, track (song), or directory (MP3 file).



Press the **REPEAT** button.

- Each time the button is pressed during playback, the repeat playback mode changes as follows:



Repeat Playback Options

CHAPTER : Repeatedly plays the selected chapter.

TITLE : Repeatedly plays the selected title.

GROUP : Repeatedly plays the selected group.

RANDOM : Plays tracks in random order.

(A track that has already been played may be played again.)


TRACK : Repeatedly plays the selected track.

DIR : Repeatedly plays all tracks in the selected folder.


DISC : Repeatedly plays the entire disc.

OFF : Cancels Repeat Playback.

To Select a Repeat Playback Mode in the Disc Information Screen

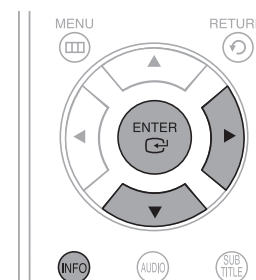

- Press the **INFO** button twice.
- Press the Cursor **▶** button to move to the REPEAT PLAYBACK (◀▶) display.
- Press the Cursor **▼** button to select the desired Repeat Playback mode.
 - To select another album and track, repeat Steps 2 and 3 above.
- Press the **ENTER** button.

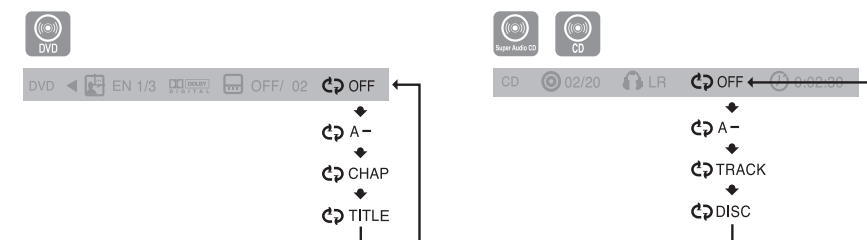

- For Divx, MP3 and JPEG discs, you cannot select Repeat Play from the information display screen.


Using the Playback Function (Con't)

GB

A-B Repeat Playback



You can repeatedly play back a designated section of a DVD.

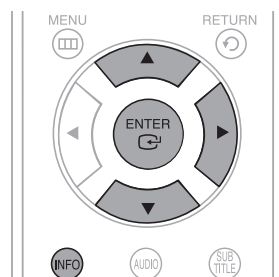

- 1 Press the **INFO** button twice.
- 2 Press the Cursor **▶** button to move to the REPEAT PLAYBACK (↻) display.
- 3 Press the Cursor **▲**, **▼** button to select <A-> and then press the **ENTER** button at the beginning of the desired segment.
 - When the **ENTER** button is pressed, the selected position will be stored in memory.
- 4 Press the **ENTER** button at the end of the desired segment.
 - The specified segment will be played repeatedly.


DVD ◀ ▶ EN 1/3 00:00:37 OFF/ 02 ↻ A-B
A TO B REPEAT ON

- To return to normal playback, press the Cursor **▲**, **▼** button to select **↻ OFF**.



• The A-B Repeat function does not operate with DivX, SACD, MP3 or JPEG discs.

Step Function

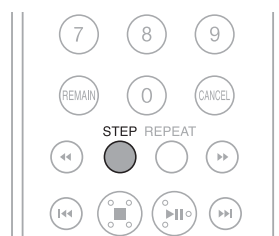

- Press the **STEP** button.
- The picture moves forward one frame each time the button is pressed during playback.




• No sound is heard during step motion playback.

Angle Function



This function allows you to view the same scene in different angles.

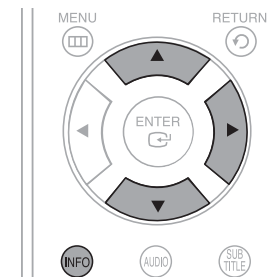

- 1 Press the **INFO** button.
- 2 Press the Cursor **▶** button to move to ANGLE (⌂) display.
- 3 Press the Cursor **▲**, **▼** or numeric buttons to select the desired angle.
 - Each time the button is pressed, the angle changes as follows:

DVD 01/01 001/040 0:00:37 ⌂ 1/3
⌂ 2/3
⌂ 3/3




• The Angle function works only with discs on which multiple angles have been recorded.

Zoom (Screen Enlarge) Function



This function allows you to enlarge a particular area of the displayed image.

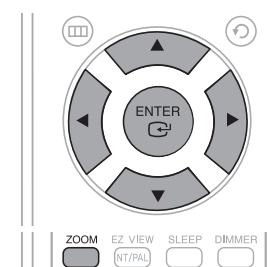

- 1 Press the **ZOOM** button.
- 2 Press the Cursor **▲**, **▼**, **◀**, **▶** button to move to the area you want to enlarge.
- 3 Press the **ENTER** button.
 - Each time the button is pressed, the zoom level changes as follows:

ZOOM X 1.5 → ZOOM X 2 → ZOOM X 3 → ZOOM OFF




• When a DivX disc is being played, the screen is enlarged up to twice the normal size.

Using the Playback Function (Con't)

GB

EZ VIEW Function

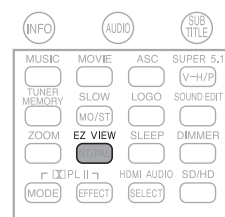

Press the **EZ VIEW** button.

- Each time the button is pressed, the zoom function will switch between On and Off.
- When a movie is played in Widescreen format, black bars at the top and bottom of the TV screen can be removed by pressing the EZ VIEW button.




- This function will not work if the DVD is recorded with multi-camera angle format.
- Black bars may not disappear because some DVD discs have a built-in horizontal to vertical ratio.
- This feature is not supported for DivX discs.
- During the EZ View operation, some of the left and right sides may be cut slightly.

Bonus Group



Some DVD-Audio discs have an extra 'bonus' group that requires a 4-digit key number to access. See the disc packaging for details and the-key number.

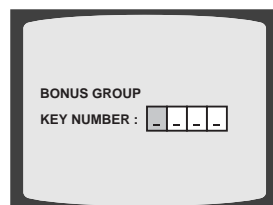

When you play a DVD-Audio disc that has a bonus group, the key number input screen appears automatically.



- If you eject the disc, switch the power off, or unplug the player, you will need to re-enter the key number.

Navigating Pages



During playback, press the **↕** button on the remote control.

- You can select the desired image from a DVD-Audio disc containing still images.
- With some discs, you may not be able to select images.


Audio Language Selection Function




1 Press the **INFO** button twice.

2 Press the Cursor **▲**, **▼** button or numeric buttons to select the desired audio language.

- Depending on the number of languages on a DVD disc, a different audio language (ENGLISH, SPANISH, FRENCH, etc.) is selected each time the button is pressed.

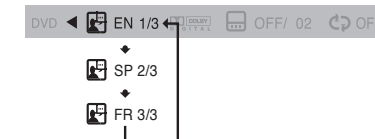


Subtitle Language Selection Function

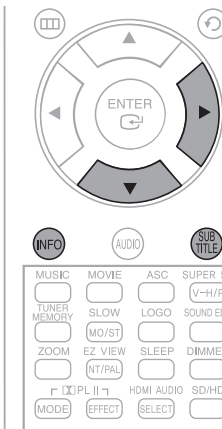

1 Press the **INFO** button twice.

2 Press the Cursor **▶** button to move to the SUBTITLE () display.


3 Press the Cursor **▼** button or numeric buttons to select the desired subtitle.

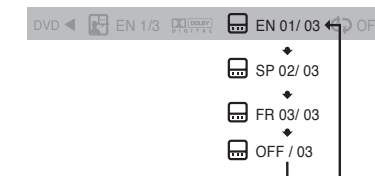


- To operate this function, you can also press the AUDIO or SUBTITLE buttons on the remote control.
- Depending on the disc, the Subtitle and Audio Language functions may not be available.

OPERATION

Moving Directly to a Scene/Song

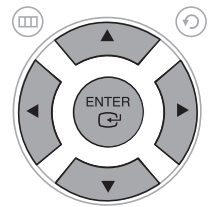

- 1** Press the **INFO** button.
- 2** Press the Cursor ▲, ▼ button or numeric buttons to select the desired title/track and then press the **ENTER** button.
- 3** Press the Cursor ◀, ▶ button to move to the Chapter (⊞) display.
- 4** Press the Cursor ▲, ▼ button or numeric buttons to select the desired chapter and then press the **ENTER** button.
- 5** Press the Cursor ◀, ▶ button to move to time (⌚) display.
- 6** Press the numeric buttons to select the desired time and then press the **ENTER** button.



Press the **numeric** buttons.

- The selected file will be played.
- When playing an MP3 or JPEG disc, you cannot use the Cursor ▲, ▼ button to move to a folder. To move a folder, press the STOP (■) and then press the Cursor ▲, ▼ button.










- You can press the **⏮⏭** button on the remote control to move directly to the desired title, chapter, or track.
- Depending on the disc, you may not be able to move to the selected title or time.

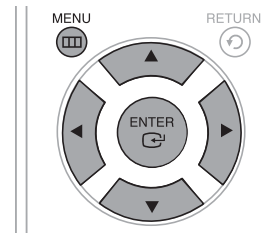Using the Disc Menu



You can use the menus for the audio language, subtitle language, profile, etc. DVD menu contents differ from disc to disc.




- 1** In Stop mode, press the **MENU** button.
- 2** Press the Cursor ,  button to move to the **<Disc Menu>** and then press the **ENTER** button.
 - When you select Disc Menu and it is not supported by the disc, the **<This menu is not supported>** message appears on the screen.
- 3** Press the Cursor , , ,  button to select the desired item.
- 4** Press the **ENTER** button.

- The Disc menu display may be different depending on the disc.

Using the Title Menu



For DVDs containing multiple titles, you can view the title of each movie. Depending on the disc, the availability of this feature may vary.

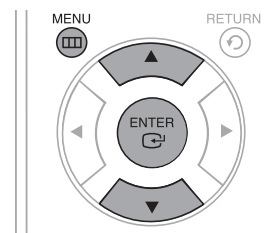


- 1 In Stop mode, press the **MENU** button.
 - 2 Press the Cursor **▲**, **▼** button to move to the **<Title Menu>**.
 - 3 Press the **ENTER** button.
 - The title menu appears.
- Press the **MENU** button to exit the setup screen.


- The Title menu display may be different depending on the disc.

Playing Media Files using the USB HOST Feature

You can enjoy media files such as pictures, movies and music saved in an MP3 player, USB memory or digital camera in high quality video with 5.1 channel home theater sound by connecting the storage device to the USB port of the home theater.

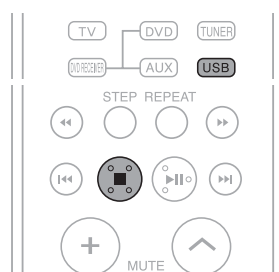

1 Connect the USB device to the USB port on the back of the unit.

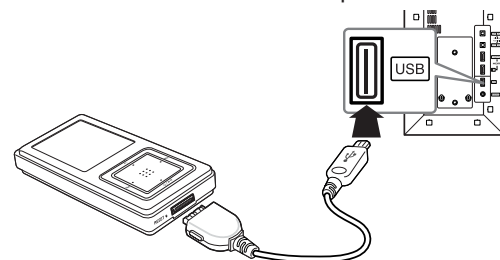

2 Press the **FUNCTION** button on the main unit or the **USB** button on the remote control to select the USB mode.

- "USB" appears on the display screen and then disappears.
- The USB MENU screen appears on the TV screen and the saved file is played.

3 To stop playback, press the **STOP** (■) button.

➤ Safe USB Removal

To prevent damage to the memory stored in the USB device, perform safe removal before disconnecting the USB cable.

- (1) Press the **STOP** (■) button twice in a row.
The display will show **REMOVE USB**.
- (2) Remove the USB cable.

• To listen to your music files with 5.1 channel home theater sound, you must set the Dolby Pro Logic II mode to Matrix. (See page 54)


Skip Forward/Back



During playback, press the **SKIP FORWARD** (▶▶) button.

- When there is more than one file and you press the **SKIP FORWARD** (▶▶) button, the next file is selected.
- When there is more than one file and you press the **SKIP BACK** (◀◀) button, the previous file is selected.

Fast Playback

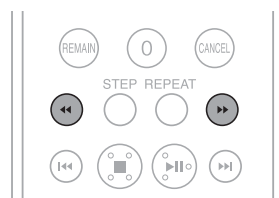

To play back the disc at a faster speed, press the **FAST FORWARD** (▶▶▶) button during playback.

- Each time you press either button, the playback speed will change as follows:
2x → 4x → 8x → 32x → Normal.

Compatible Devices

1. USB devices that support USB Mass Storage v1.0. (USB devices that operate as a removable disc in Windows (2000 or later) without additional driver installation.)
2. MP3 Player: HDD and flash type MP3 players.
3. Digital camera: Cameras that support USB Mass Storage v1.0.
 - Cameras that operate as a removable disc in Windows (2000 or later) without additional driver installation.
4. USB HDD and USB Flash Drive: Devices that support USB2.0 or USB1.1.
 - You may experience a difference in playback quality when you connect a USB1.1 device.
 - For a USB HDD, make sure to connect an auxiliary power cord to the USB HDD for proper operation.
5. USB card Reader: One slot USB card reader and Multi slot USB card reader.
 - Depending on the manufacturer, the USB card reader may not be supported.
 - If you install multiple memory devices into a multi card reader, you may experience problems.
6. If you use a USB extension cable, the USB device might not be recognized.

Supported Formats

	File name	File extension	Bit rate	Version	Pixel	Sampling Frequency
Still Picture	JPG	JPG .JPEG	—	—	640x480	—
Music	MP3	.MP3	80~384kbps	—	—	44.1kHz
	WMA	.WMA	56~128kbps	V8	—	44.1kHz
Movie	WMV	.WMV	4Mbps	V1,V2,V3,V7	720x480	44.1KHz~48KHz
	DivX	.AVI,.ASF	4Mbps	DivX3.11~DivX5.1, XviD	720x480	44.1KHz~48KHz

- CBI (Control/Bulk/Interrupt) is not supported.
- Digital Cameras that use PTP protocol or require additional program installation when connected to a PC are not supported.
- A device using NTFS file system is not supported. (Only FAT 16/32 (File Allocation Table 16/32) file system is supported.)
- Some MP3 players, when connected to this product, may not operate depending on the sector size of their file system.
- The USB HOST function is not supported if a product that transfers media files by its manufacturer-specific program is connected.
- Does not operate with Janus enabled MTP (Media Transfer Protocol) devices.
- **The USB host function of this product does not support all USB devices.**
For information on the supported devices, see page 70.

Setting the Language




OSD(On-Screen Display) language is set to English by default.



- 1 In Stop mode, press the **MENU** button.
 - 2 Press the Cursor **▼** button to move to **<Setup>** and then press the **ENTER** button.
 - 3 Select **<LANGUAGE>** and then press the **ENTER** button.
 - 4 Press the Cursor **▲, ▼** button to select **<OSD LANGUAGE>** and then press the **ENTER** button.
 - 5 Press the Cursor **▲, ▼** button to select the desired language and then press the **ENTER** button.
 - Once the setup is complete, the OSD will be English if English has been selected as language.
- Press the **RETURN** button to return to the previous level.
- Press the **MENU** button to exit the setup screen.




- OSD LANGUAGE : Selecting the OSD Language
 - AUDIO : Selecting the Audio Language (recorded on the disc)
 - SUBTITLE : Selecting the Subtitle Language (recorded on the disc)
 - DISC MENU : Selecting the Disc Menu Language (recorded on the disc)
- ※ If the language you selected is not recorded on the disc, menu language will not change even if you set it to your desired language.

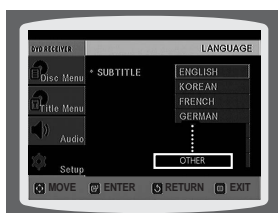

- OTHER : To select another language, select OTHER and enter the language code of your country. (See page 69 for language codes) AUDIO, SUBTITLE and DISC MENU language can be selected.

Setting TV Screen type

Depending on your TV type (Wide Screen or conventional 4:3), you can select the TV's aspect ratio.

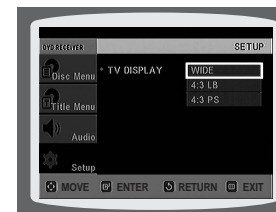

- 1 In Stop mode, press the **MENU** button.
 - 2 Press the Cursor **▼** button to move to **<Setup>** and then press the **ENTER** button.
 - 3 Press the Cursor **▼** button to move to **<TV DISPLAY>** and then press the **ENTER** button.
 - 4 Press the Cursor **▲, ▼** button to select the desired item and then press the **ENTER** button.
 - Once the setup is complete, you will be taken to the previous screen.
- Press the **RETURN** button to return to the previous level.
- Press the **MENU** button to exit the setup screen.

Adjusting the TV Aspect Ratio (Screen Size)

The horizontal to vertical screen size ratio of conventional TVs is 4:3, while that of widescreen and high definition TVs is 16:9. This ratio is called the aspect ratio. When playing DVDs recorded in different screen sizes, you should adjust the aspect ratio to fit your TV or monitor.

For a standard TV, select either <4:3LB> or <4:3PS> option according to personal preference. Select "16:9" if you have a widescreen TV.



WIDE

- Select this to view a 16:9 picture in the full-screen mode on your widescreen TV.
- You can enjoy the widescreen aspect.



4:3LB (4:3 Letterbox)

- Select this to play a 16:9 picture in the letter box mode on a conventional TV.
- Black bars will appear at the top and bottom of the screen.



4:3PS (4:3 Pan&Scan)


- Select this to play a 16:9 picture in the pan & scan mode on a conventional TV.
- You can see the central portion of the screen only (with the sides of the 16:9 picture cut off).



- If a DVD is in the 4:3 ratio, you cannot view it in widescreen.
- Since DVD discs are recorded in various image formats, they will look different depending on the software, the type of TV, and the TV aspect ratio setting.

Setting Parental Controls (Rating Level)

Use this to restrict playback of adult or violent DVDs you do not want children to view.

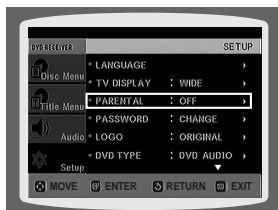



- 1 In Stop mode, press the **MENU** button.
- 2 Press the Cursor **▼** button to move to **<Setup>** and then press the **ENTER** button.
- 3 Press the Cursor **▼** button to move to **<PARENTAL>** and then press the **ENTER** button.
- 4 Press the Cursor **▲, ▼** button to select the desired rating level and then press the **ENTER** button.
 - If you have selected Level 6, you cannot view DVDs with Level 7 or higher.
 - The higher the level, the closer the content is to violent or adult material.
- 5 Enter the password and then press the **ENTER** button.
 - The password is set to "7890" by default.
 - Once the setup is complete, you will be taken to the previous screen.

- Press the **RETURN** button to return to the previous level.
- Press the **MENU** button to exit the setup screen.

• This function works only if a DVD disc contains the rating level information.

Setting the Password

You can set the password for the Parental (rating level) setting.

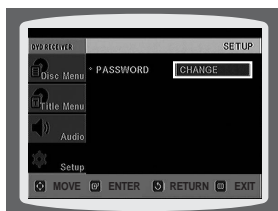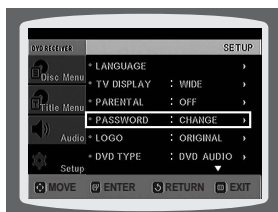

- 1 In Stop mode, press the **MENU** button.
- 2 Press the Cursor **▼** button to move to **<Setup>** and then press the **ENTER** button.
- 3 Press the Cursor **▼** button to move to **<PASSWORD>** and then press the **ENTER** button.
- 4 Press the **ENTER** button.
- 5 Enter the password and then press the **ENTER** button.
 - Enter the old password, a new password, and confirm new password.
 - The setting is complete.

• The password is set to "7890" by default.

If you have forgotten the rating level password, do the following


- While the player is in No Disc mode, hold the DVD Player's **STOP** (■) button for longer than 5 seconds. "INITIALIZE" appears on the display and all settings will return to the default values.
- Press the **POWER** button.

Using the **RESET** function will erase all stored settings.
Do not use this unless necessary.

Setting the Wallpaper




While watching a DVDx or JPEG CD, you can set the image you like as background wallpaper.



- 1 During playback, press the **PLAY/PAUSE** button when an image you like appears.
- 2 Press the **LOGO** button.
 - <COPY LOGO DATA> will be displayed on the TV screen.
- 3 The power will turn off and then back on.
 - The selected wallpaper will be displayed.
 - You can select up to 3 wallpaper settings.

To Select One of the 3 Wallpaper Settings you've made

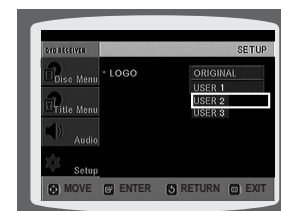

- 1 In Stop mode, press the **MENU** button.
- 2 Press the Cursor **▼** button to move to **<Setup>** and then press the **ENTER** button.
- 3 Press the Cursor **▼** button to move to **<LOGO>** and then press the **ENTER** button.
- 4 Press the Cursor **▲, ▼** button to select the desired **<USER>**, and then press the **ENTER** button.
 - This selects one of the 3 wallpaper screens
- 5 Press the **MENU** button to exit the setup screen.

- ORIGINAL : Select this to set the Samsung Logo image as your wallpaper.
- USER : Select this to set the desired image as your wallpaper.

- Press the **RETURN** button to return to the previous level.
- Press the **MENU** button to exit the setup screen.

DVD Playback Mode

Some DVD-Audio discs contain DVD-Video as well as DVD-Audio.

To play back the DVD-Video portion of the DVD-Audio disc, set the unit to DVD-Video mode.



- 1 Press the EJECT button and then press the MENU button.
- 2 Press the Cursor ▼ button to move to <Setup> and then press the ENTER button.
- 3 Press the Cursor ▼ button to move to <DVD TYPE> and then press the ENTER button.
- 4 Press the Cursor ▲, ▼ button to move to <DVD VIDEO> and then press the ENTER button.
 - Set steps 1 ~ 4 again if you want to switch to DVD AUDIO Play mode.

When Selecting DVD Play Mode:

- DVD VIDEO : set to play the DVD video contents contained on a DVD audio disc.
- DVD AUDIO : set to play the default DVD audio.



- DVD Play mode is set to DVD Audio as factory default setting.
- Powering off the main unit will automatically switch to the DVD Audio mode.

DivX (R) registration

Please use the Registration code to register this player with the DivX (R) video on demand format.

To learn more, go to www.divx.com/vod.

SACD Playback Mode

If the SACD is a HYBRID disc, you can play the disc in CDDA MODE as well.



- 1 Press the EJECT button and then press the MENU button.
- 2 Press the Cursor ▼ button to move to <Setup> and then press the ENTER button.
- 3 Press the Cursor ▼ button to move to <SACD TYPE> and then press the ENTER button.
- 4 Press the Cursor ▲, ▼ button to move to <SACD MODE> and then press the ENTER button.
 - Set steps 1 ~ 4 again if you want to switch to CDDA Play mode.


- SACD MODE : Set this mode to play SACD.
- CDDA MODE : Set this mode to play CDDA contents included in a disc.



- Powering off the main unit will automatically switch to the SACD mode.

Setting the Speaker Mode

Signal outputs and frequency responses from the speakers will automatically be adjusted according to your speaker configuration and whether certain speakers are used or not.

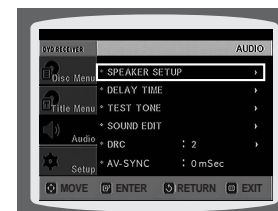

- 1 In Stop mode, press the MENU button.
- 2 Press the Cursor ▼ button to move to <Audio> and then press the ENTER button.
- 3 In the <SPEAKER SETUP>, press the ENTER button again.
- 4 Press the Cursor ▲, ▼, ◀, ▶ button to move to the desired speaker and then press the ENTER button.
 - For C, SL, and SR, each time the button is pressed, the mode switches alternately as follows : SMALL → NONE.
 - For L and R, the mode is set to SMALL.

- SMALL : Select this when using the speakers.
- NONE : Select this when no speakers are connected.



- Depending on PRO LOGIC and STEREO settings, the speaker mode may vary (see page 54).

Setting the Delay Time


If the speakers cannot be placed at equal distances from the listening position, you can adjust the delay time of the audio signals from the center and rear speakers.



- 1 In Stop mode, press the **MENU** button.
 - 2 Press the Cursor **▼** button to move to **<Audio>** and then press the **ENTER** button.
 - 3 Press the Cursor **▼** button to move to **<DELAY TIME>** and then press the **ENTER** button.
 - 4 Press the Cursor **▲, ▼, ◀, ▶** button to move to the desired speaker and then press the **ENTER** button.
 - 5 Press the Cursor **◀, ▶** button to set the Delay time.
 - You can set the delay time for C between 00 and 05mSEC and for SL and SR between 00 and 15mSEC.
- Press the **RETURN** button to return to the previous level.
 - Press the **MENU** button to exit the setup screen.

Setting up the Speaker Delay Time

When 5.1CH Surround Sound is played, you can enjoy the best sound if the distance between you and each speaker is the same. Since the sounds arrive at the listening position at different times depending on the placement of speakers, you can adjust this difference by adding a delay effect to the sound of the Center and Surround Speakers.

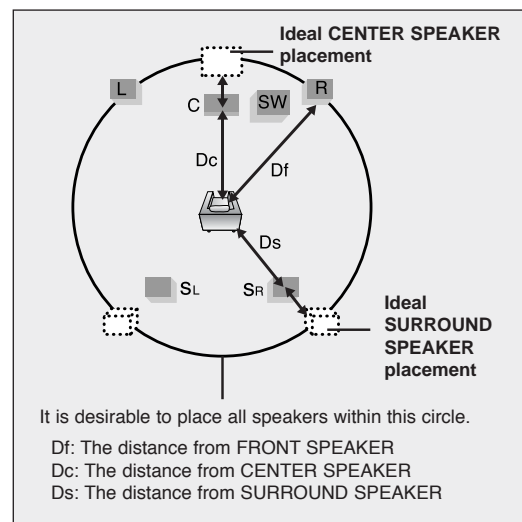

Setting CENTER SPEAKER

If the distance of Dc is equal to or longer than the distance of Df in the figure, set the mode as 0ms. Otherwise, change the setting according to the table.

Distance between Df and Dc	0.00 m	0.34 m	0.68 m	1.02 m	1.36 m	1.70 m
Delay Time	0 ms	1 ms	2 ms	3 ms	4 ms	5 ms

Setting REAR (SURROUND) SPEAKERS

If the distance of Df is equal to the distance of Ds in the figure, set the mode as 0ms. Otherwise, change the setting according to the table.


Distance between Df and Dc	0.00 m	1.02 m	2.04 m	3.06 m	4.08 m	5.10 m
Delay Time	0 ms	3 ms	6 ms	9 ms	12 ms	15 ms



- With **DOLBY II** (Dolby Pro Logic II), the delay time may be different for each mode.
- With AC-3 and DTS, the delay time can be set between 00 and 15mSEC.
- The Center channel is only adjustable on 5.1 channel discs.

Setting the Test Tone


Use the Test Tone feature to check the speaker connections.

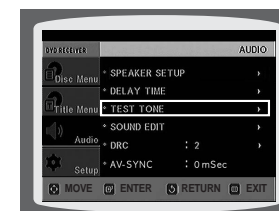

- 1 In Stop mode, press the **MENU** button.
 - 2 Press the Cursor **▼** button to move to **<Audio>** and then press the **ENTER** button.
 - 3 Press the Cursor **▼** button to move to **<TEST TONE>** and then press the **ENTER** button.
 - The test tone will be sent to L → C → R → SR → SL → SW in order.
If the **ENTER** button is pressed again at this time, the test tone will stop.
- Press the **RETURN** button to return to the previous level.
 - Press the **MENU** button to exit the setup screen.

Setting the Audio

You can adjust the balance and level for each speaker.

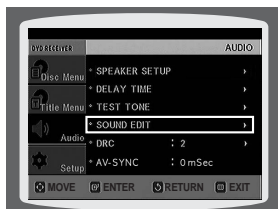


- 1 In Stop mode, press the **MENU** button.
- 2 Press the Cursor **▼** button to move to **<Audio>** and then press the **ENTER** button.
- 3 Press the Cursor **▼** button to move to **<SOUND EDIT>** and then press the **ENTER** button.
- 4 Press the Cursor **▲, ▼** button to select and adjust the desired item.
Press the Cursor **◀, ▶** button to adjust the settings.




- Press the **RETURN** button to return to the previous level.
- Press the **MENU** button to exit the setup screen.

Manually Adj using the Speaker Volume and Balance with the SOUND EDIT Button.

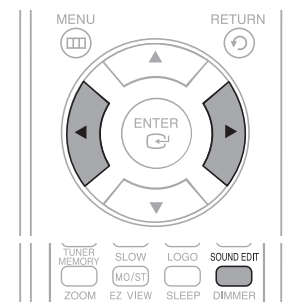

Press the **SOUND EDIT** button and then press the Cursor **◀, ▶** button.

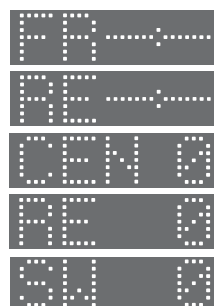

Adj using Front/Rear Speaker Balance


- You can select between 0, -6, and OFF.
- The volume decreases as you move closer to -6.

Adj using Center/Rear/Subwoofer Speaker Level

- The volume level can be adjusted in steps from +6dB to -6dB.
- The sound gets louder as you move closer to +6dB and quieter as you get closer to -6dB.

Setting the DRC (Dynamic Range Compression)

This feature balances the range between the loudest and quietest sounds. You can use this function to enjoy Dolby Digital sound when watching movies at low volume at night.

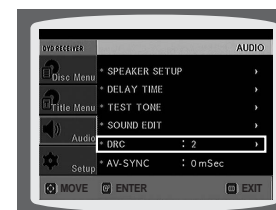


- 1 In Stop mode, press the **MENU** button.
- 2 Press the Cursor **▼** button to move to **<Audio>** and then press the **ENTER** button.
- 3 Press the Cursor **▼** button to move to **<DRC>** and then press the **ENTER** button.
- 4 Press the Cursor **▲, ▼** button to adjust the DRC.
 - When the Cursor **▲** button is pressed, the effect is greater, and when the Cursor **▼** button is pressed, the effect is smaller.




- Press the **RETURN** button to return to the previous level.
- Press the **MENU** button to exit the setup screen.

Setting the AV SYNC

Video may look slower than the audio if it is connected to a digital TV. If this occurs, adjust the audio delay time to match the video.

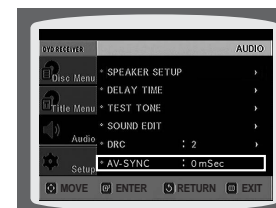


- 1 In Stop mode, press the **MENU** button.
- 2 Press the Cursor **▼** button to move to **<Audio>** and then press the **ENTER** button.
- 3 Press the Cursor **▼** button to move to **<AV-SYNC>** and then press the **ENTER** button.
- 4 Press the Cursor **▲, ▼** button to select the AV-SYNC Delay Time and then press the **ENTER** button.
 - You can set the audio delay time between 0 ms and 300 ms. Set it to the optimal status.

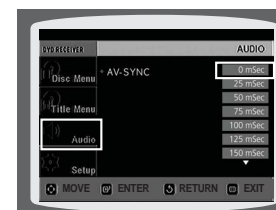

- Press the **RETURN** button to return to the previous level.
- Press the **MENU** button to exit the setup screen.


Dolby Pro Logic II Mode

You can select the desired Dolby Pro Logic II audio mode.

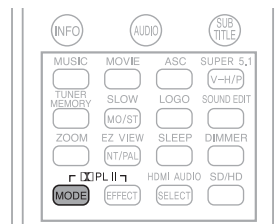

Press the **PL II MODE** button.

- Each time the button is pressed, the mode changes as follows.

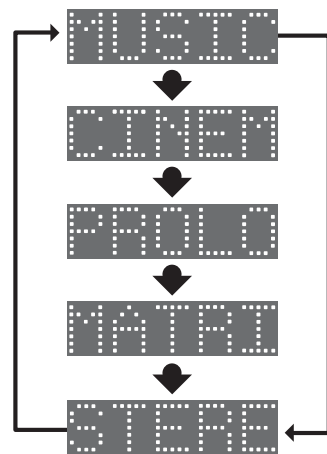

PRO LOGIC II

- MUSIC**: When listening to music, you can experience sound effects as if you are listening to the actual performance.
- CINEMA** : Adds realism to the movie soundtrack.
- PRO LOGIC** : You will experience a realistic multi-channel effect, as if using five speakers, while using just the front left and right speakers.
- MATRIX** : You will hear 5.1 channel surround sound.


STEREO : Select this to listen to sound from the front left and right speakers and the subwoofer only.



- When selecting Pro Logic II mode, connect your external device to the AUDIO INPUT jacks (L and R) on the player. If you connect to only one of the inputs (L or R), you cannot listen to surround sound.

Dolby Pro Logic II Effect

This function works only in Dolby Pro Logic MUSIC mode.

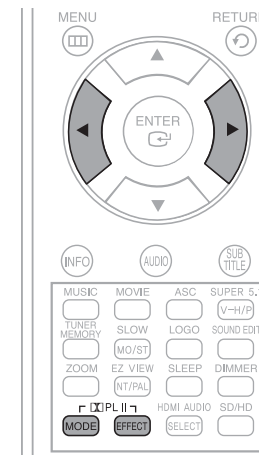

- Press the **PL II MODE** button to select **<MUSIC>** mode.
- Press the **PL II EFFECT** button to select **<P> (PANORAMA)**, then press the Cursor **◀, ▶** button to select the desired effect setting.

- You can select either 0 or 1.
- This mode extends the front stereo image to include the surround speakers for an exciting "wraparound" effect with side wall imaging.



- Press the **PL II EFFECT** button to select **<C> (CENTER WIDTH)**, then press the Cursor **◀, ▶** button to select the desired effect setting.

- You can select between 0 and 7.
- This sets the width of the center image. The higher the setting, the less sound comes from the center speaker.



- Press the **PL II EFFECT** button to select **<D> (DIMENSION)**, then press the Cursor **◀, ▶** button to select the desired setting

- You can select between 0 and 6.
- Incrementally adjusts the sound field (DSP) from the front or rear.



- When playing a DVD disc encoded with two or more channels, multi-channel mode will be selected automatically and **PL II (Dolby Pro Logic II)** button does not work.


Auto Sound Calibration Setup

GB


This function is available only for DVD/CD playback.

Auto Sound Calibration

By setting the auto sound calibration function just once when you relocate or install the unit, you can have the unit automatically recognize the distance between speakers, levels between channels, and frequency characteristics to create a 5.1-channel sound field optimized for the listener's environment.

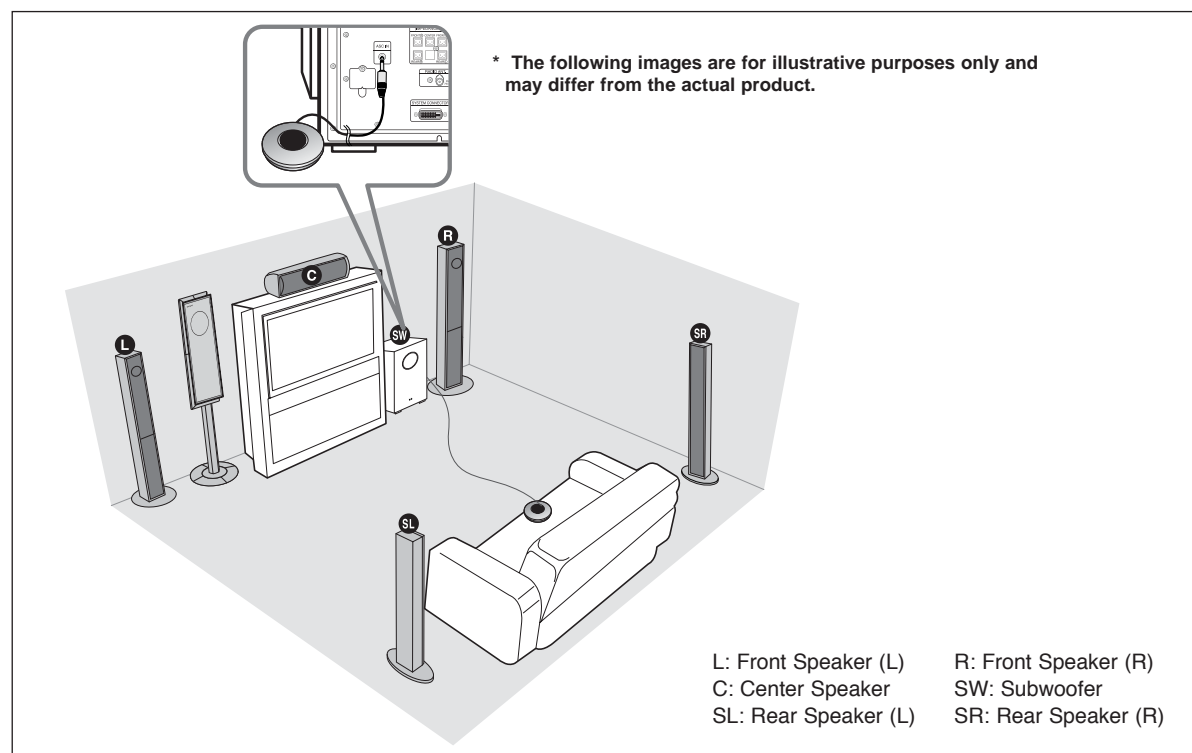

- If you have not performed the ASC function, pressing the Auto Sound Calibration button without connecting the auto sound calibration microphone will display the message **<PLEASE SET ASC FUNCTION>** in the display.
- Because the volume level of the tone is fixed during the auto sound calibration setup, you cannot adjust the volume using the volume control buttons.
- If the auto sound microphone is disconnected during the auto sound calibration setup, the setup will be cancelled.

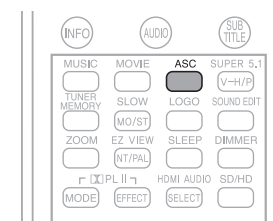

A tone is output.




A result for each speaker is displayed.

- 1 Connect the auto sound calibration microphone to the auto sound calibration input connector on the subwoofer.
- 2 Place the auto sound calibration microphone at the listener's position.
- 3 Press the **Volume Control** buttons on the main unit to make adjustments as below.
 - If the distance between the listener and the speaker is over 5 m:
Set the main unit's volume to over 25.
 - If the distance between the listener and the speaker is 3 to 5 m:
Set the main unit's volume to 25.
 - If the distance between the listener and the speaker is less than 3 m:
Set the main unit's volume to 15.
- 4 Press the **ASC** button.
 - To create the optimal 5.1 channel sound field, the selections are in the following sequence:
L → C → R → SR → SL → SW
 - The auto sound calibration setup takes about 2 minutes to complete.
- 5 When the message **<REMOVE MIC>** appears in the display, unplug the auto sound calibration microphone.
 - To cancel the auto sound calibration setup, press the **ASC** button.
 - The tone output stops, **<CANCEL ASC>** appears in the display followed by **<REMOVE MIC>**, and the setup is cancelled.
 - To listen in the auto sound calibration mode, briefly press the **ASC** button.
 - The selection alternates between **<ASC ON>** and **<ASC OFF>** in the display.
 - If you select **<ASC ON>**, you will hear sound in the auto sound calibration mode.
 - If you select **<ASC OFF>**, you will hear sound in the mode set in the audio setting of the setup screen.

To Turn the Sound Logo On/Off


When you turn on the power, the unit produces a sound logo after the disc is read to notify that the unit is optimized for playback.

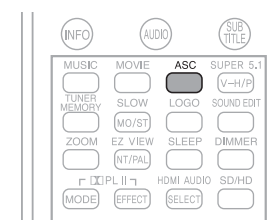

- 1 Press and hold the **ASC** button.
 - **<S.LOGO ON>** or **<S.LOGO OFF>** appears in the display.
- 2 Briefly press the **ASC** button.
 - Each time the button is pressed, the selection alternates between **<S.LOGO ON>** and **<S.LOGO OFF>**.
 - If you select **<S.LOGO ON>**, a sound logo will be output when the disc reading is finished after power-on.
 - If you select **<S.LOGO OFF>**, no sound logo will be output.

Super 5.1

You can reproduce a 2-channel sound source, such as CD, and radio broadcast, in 5.1-channel surround sound.

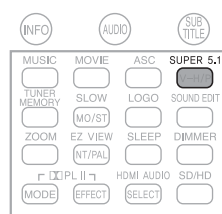


Press the **SUPER5.1** button.

- Each time the button is pressed, the selection alternates between **<SUPER 5.1>** and **<BYPASS>**.
- Select **<SUPER 5.1>** to play 2-channel sound in 5.1 channels.

Music

If you press the **MUSIC** button when listening to a 2-channel sound source, it will be reproduced in 4.1-channel surround sound so that you can enjoy a dynamic sound with a sense of presence.

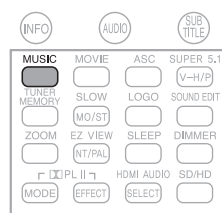


Press the **MUSIC** button.

- Each time the button is pressed, the selection changes as follows :
CONCERT1 → **CONCERT2** → **JAZZ** → **CATHEDRAL** → **BYPASS**

Movie

You can select from 4 different sound field modes for movies.

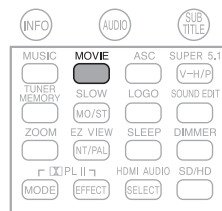

Press the **MOVIE** button.

- Each time the button is pressed, the selection changes as follows :
VIRTUAL 9.1 → **EX-MOVIE** → **CINEMA** → **SPORTS** → **BYPASS**


※ **VIRTUAL 9.1**: Provides surround sound effect for audiences at home that simulates 9.1 channel surround sound of a movie theater.



- When you insert a DVD recorded in 2-channel or multi-channel format and press the SUPER 5.1 button, the message **<THIS FUNCTION APPLIES ONLY 2CH SOURCE>** appears in the display and it will not work.
- This function does not work with SACD or DVD-AUDIO discs.
- 5.1 channel outputs are available in VIRTUAL 9.1 or EX-MOVIE mode only.


Virtual Headphone Function

Use headphones (3.5 Ø) (not supplied) for private listening pleasure. You can enjoy dynamic sound effects similar to that of 5.1 channel surround sound using conventional stereo headphones.

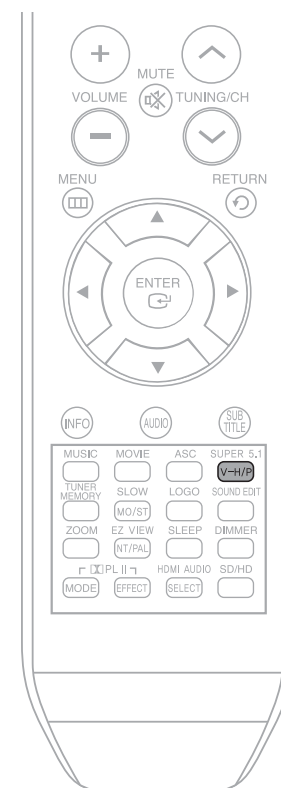

1 Plug the headphones into the headphone jack.

- You can purchase headphones from most Electronics stores.

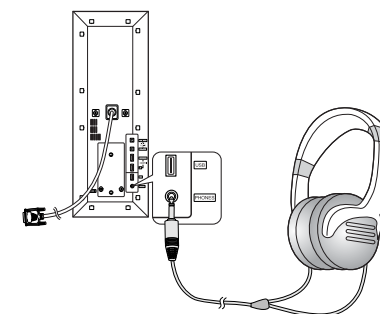


2 Press the **V-H/P** button.

- Each time the button is pressed, the selection alternates between **<V-H/P ON>** and **<V-H/P OFF>**.

- **V-H/P ON** : Select to enjoy a 5.1-channel surround sound that gives the feeling of being in a baseball park or concert hall.
- **V-H/P OFF** : Select to listen to a standard 2-channel stereo sound.



- Do not listen at extremely high volume levels when using headphones. Extended, high-volume listening can lead to permanent hearing loss.

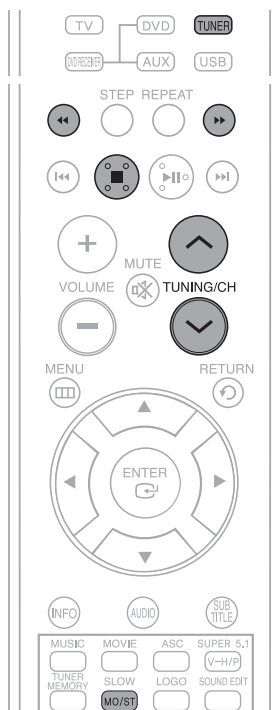


Remote Control

- 1 Press the **TUNER** button to select the **FM** band.
- 2 Tune in to the desired station.
 - Automatic Tuning 1 : When the **◀▶** button is pressed, a preset broadcast station is selected.
 - Automatic Tuning 2 : Press and hold the **↕** button to automatically search for active broadcasting stations.
 - Manual Tuning : Briefly press the **↕** button to increase or decrease the frequency incrementally

Main Unit

- 1 Press the **FUNCTION** button to select the **FM** band.
 - 2 Select a broadcast station.
 - Automatic Tuning 1 : Press the **STOP** (■) button to select **<PRESET>** and then press the **◀▶** button to select the preset station.
 - Automatic Tuning 2 : Press the **STOP** (■) button to select **<MANUAL>** and then press and hold the **◀▶** button to automatically search the band.
 - Manual Tuning : Press the **STOP** (■) button to select **<MANUAL>** and then briefly press the **◀▶** button to tune in to a lower or higher frequency.
- Press the **MO/ST** button to listen in Mono/Stereo.
- Each time the button is pressed, the sound switches between **<STEREO>** and **<MONO>**.
 - In a poor reception area, select MONO for a clear, interference-free broadcast.

Presetting Stations

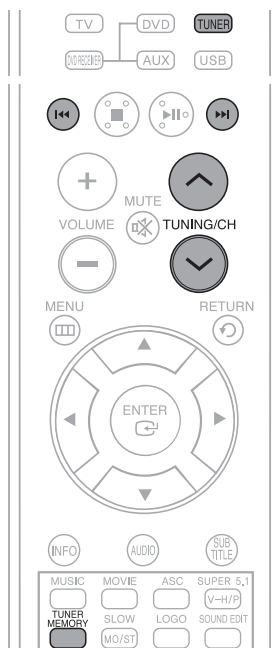

Example : Presetting FM 89.10 in the memory


- 1 Press the **TUNER** button to select the **FM** band.
- 2 Press the **↕** button to select **<89.10>**.
- 3 Press the **TUNER MEMORY** button.
 - "01" flashes in the display.
- 4 Press the **◀▶** button to select preset number.
 - You can select between 1 and 15 presets.
- 5 Press the **TUNER MEMORY** button again.
 - Press the TUNER MEMORY button before "number" disappears from the display.
 - "number" disappears from the display and the station is stored in memory.
- 6 To preset another station, repeat steps 2 to 5.

- To tune in to a preset station, press the **◀▶** button on the remote control to select a channel.

✎ • This unit does not receive AM broadcasts.

Using the RDS (Radio Data System) to receive FM stations

RDS allows FM stations to send an additional signal along with their regular program signals. For example, the stations send their station names, as well as information about what type of program they broadcast, such as sports or music, etc.

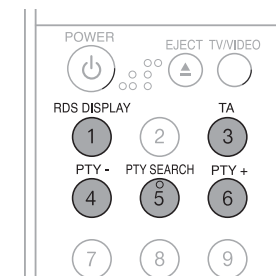

When tuned to an FM station which provides the RDS service, the RDS indicator lights up on the display.


Description on RDS function

- PTY (Program Type) : Displays the type of programme currently being broadcast
- PS NAME (Program Service Name) : Indicates the name of broadcasting station and is composed of 8 characters.
- RT (Radio Text) : Decodes the text broadcast by a station (if any) and is composed of maximum 64 characters.
- CT (Clock Time) : Decodes the real time clock from the FM frequency. Some stations may not transmit PTY, RT or CT information therefore this may not be displayed in all cases.
- TA (Traffic Announcement) : When this symbol flashes it shows that the traffic announcement is in progress.

✎ • RDS may not operate correctly if the station tuned is not transmitting RDS signal properly or if the signal strength is weak.

TO show the RDS signals

You can see the RDS signals the station sends on the display.

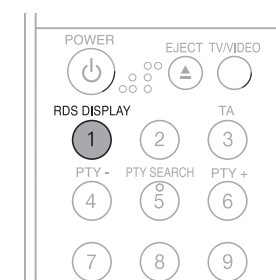

Press the **RDS DISPLAY** button while listening to an FM station.

- Each time you press the button, the display change to show you the following information:

PS NAME → RT → CT → Frequency

- PS (Program Service) : While searching, "PS" appears and then the station names will be displayed. "NO PS" appears if no signal is sent.
- RT(RadioText) : while searching, "RT" appears and then text messages the station sends will be displayed. "NO RT" appears if no signal is sent.
- Frequency : station frequency (non-RDS service)

About characters shown in the display

When the display shows PS, or RT signals, the following characters are used.

- The display window cannot differentiate upper case and lower case letters and always uses upper case letters.
- The display window cannot show accented letters, "A," for instance, may stands for accented "A's" like "Ä, Â, Ã, Ä, Å and Æ."

✎ • If searching finishes at once, "PS", and "RT" will not appear on the display.

About RDS broadcasting (Con't)


PTY (Program Type) indication and PTY-SEARCH function

One of the advantages of the RDS service is that you can locate a particular kind of program from the preset channels by specifying the PTY codes.

To search for a program using the PTY codes

Before you start, remember...

- The PTY Search is only applicable to preset stations.
- To stop searching any time during the process, press PTY SEARCH while searching.
- There is a time limit in doing the following steps. If the setting is cancelled before you finish, start from step 1 again.
- When pressing the buttons on the primary remote control, make sure that you have selected the FM station using the primary remote control.

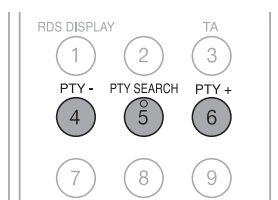

- 1 Press the PTY SEARCH while listening to an FM station.
- 2 Press the PTY- or PTY+ until the PTY code you want appears on the display.
 - The display gives you the PTY codes described to the right.
- 3 Press the PTY SEARCH again, while the PTY code selected in the previous step is still on the display.
 - The center unit searches 15 preset FM stations, stops when it finds the one you have selected, and tunes in that station.


Display	Program Type
NEWS	News including an announced opinion and report
AFFAIRS	Several matters including a current incident, documentary, discussion and analysis.
INFO	Information including weights and measures, returns and forecast, matters interesting the customer, medical information, etc.
SPORT	Sports
EDUCATE	Education
DRAMA	Drama-Radio serial, etc.
CULTURE	Culture-National or local culture including the religious problem, social science, language, theater, etc.
SCIENCE	Natural science and technology
VARIED	Others-Speech, amusing program (quiz, game), interview, comedy and satirical play, etc.
POP M	Pop music
ROCK M	Rock music
M.O.R.M	Current contemporary music considered to be "easy listening."
LIGHT M	Light classical music- Classical music and instrumental and chorus music

Display	Program Type
CLASSICS	Heavy classical music-Orchestra music, symphony, chamber music and opera
OTHER M	Other music - Jazz, R&B country music
WEATHER	Weather
FINANCE	Finance
CHILDREN	Children's programmes
SOCIAL A	Social affairs
RELIGION	Religion
PHONE IN	Phone in
TRAVEL	Travel
LEISURE	Leisure
JAZZ	Jazz Music
COUNTRY	Country Music
NATION M	National Music
OLDIES	Oldies Music
FOLK M	Folk Music
DOCUMENT	Documentary

Convenient Functions

Sleep Timer Function

You can set the time that the Home Theater will shut itself off.

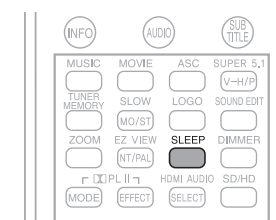


Press the **SLEEP** button.

- Each time the button is pressed, the preset time changes as follows :
10 → 20 → 30 → 60 → 90 → 120 → 150 → OFF.

- To confirm the sleep timer setting, press the **SLEEP** button.
 - The remaining time before the Home Theater will shut itself off is displayed.
 - Pressing the button again changes the sleep time from what you have set earlier.
- To cancel the sleep timer, press the **SLEEP** button until <OFF> appears on the display.

Adjusting Display Brightness

You can adjust the brightness of the display on the main unit so it won't interfere with your movie viewing.

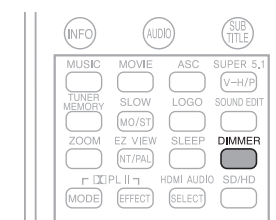

Press the **DIMMER** button.

- Each time the button is pressed, the brightness of front display will be adjusted.

Mute Function

This is useful when answering a doorbell or telephone call.



Press the **MUTE** button.

- <MUTE> appears in the display.
- To restore the sound, press the button again.

When operating a TV with the remote control



- 1 Press the **TV** button to set the remote to TV mode.
- 2 Press the **POWER** button to turn on the TV.
- 3 While holding down the **POWER** button, enter the code corresponding to your brand of TV.
 - If there is more than one code listed for your TV in the table, enter one at a time to determine which code works.

Example: For a Samsung TV
While holding down the **POWER** button, use the number buttons to enter 00, 15, 16, 17 and 40.
- 4 If the TV turns off, the setting is complete.
 - You can use the TV POWER, VOLUME, CHANNEL, and Numeric buttons (0~9).


- The remote control may not work on some brands of TVs. Also, some operations may not be possible depending on your brand of TV.
- If you do not set the remote control with the code for your brand of TV, the remote control will work on a Samsung TV by default.



TV Brand Code List

No.	Brand	Code	No.	Brand	Code
1	Admiral (M.Wards)	56, 57, 58	44	MTC	18
2	A Mark	01, 15	45	NEC	18, 19, 20, 40, 59, 60
3	Anam	01, 02, 03, 04, 05, 06, 07, 08, 09, 10, 11, 12, 13, 14	46	Nikei	03
4	AOC	01, 18, 40, 48	47	Onking	03
5	Bell & Howell (M.Wards)	57, 58, 81	48	Onwa	03
6	Brocsonic	59, 60	49	Panasonic	06, 07, 08, 09, 54, 66, 67, 73, 74
7	Candle	18	50	Penney	18
8	Cetronic	03	51	Philco	03, 15, 17, 18, 48, 54, 59, 62, 69, 90
9	Citizen	03, 18, 25	52	Philips	15, 17, 18, 40, 48, 54, 62, 72
10	Cinema	97	53	Pioneer	63, 66, 80, 91
11	Classic	03	54	Portland	15, 18, 59
12	Concerto	18	55	Proton	40
13	Contec	46	56	Quasar	06, 66, 67
14	Coronado	15	57	Radio Shack	17, 48, 56, 60, 61, 75
15	Craig	03, 05, 61, 82, 83, 84	58	RCA/Proscan	18, 59, 67, 76, 77, 78, 92, 93, 94
16	Croslex	62	59	Realistic	03, 19
17	Crown	03	60	Sampo	40
18	Curtis Mates	59, 61, 63	61	Samsung	00, 15, 16, 17, 40, 43, 46, 47, 48, 49, 59, 60, 98
19	CXC	03	62	Sanyo	19, 61, 65
20	Daewoo	02, 03, 04, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 32, 34, 35, 36, 48, 59, 90	63	Scott	03, 40, 60, 61
21	Daytron	40	64	Sears	15, 18, 19
22	Dynasty	03	65	Sharp	15, 57, 64
23	Emerson	03, 15, 40, 46, 59, 61, 64, 82, 83, 84, 85	66	Signature 2000 (M.Wards)	57, 58
24	Fisher	19, 65	67	Sony	50, 51, 52, 53, 55
25	Funai	03	68	Soundesign	03, 40
26	Futurtech	03	69	Spectricon	01
27	General Electric (GE)	06, 40, 56, 59, 66, 67, 68	70	SSS	18
28	Hall Mark	40	71	Sylvania	18, 40, 48, 54, 59, 60, 62
29	Hitachi	15, 18, 50, 59, 69	72	Symphonic	61, 95, 96
30	Inkel	45	73	Tatung	06
31	JC Penny	56, 59, 67, 86	74	Techwood	18
32	JVC	70	75	Teknika	03, 15, 18, 25
33	KTV	59, 61, 87, 88	76	TMK	18, 40
34	KEC	03, 15, 40	77	Toshiba	19, 57, 63, 71
35	KMC	15	78	Vidtech	18
36	LG (Goldstar)	01, 15, 16, 17, 37, 38, 39, 40, 41, 42, 43, 44	79	Videch	59, 60, 69
37	Luxman	18	80	Wards	15, 17, 18, 40, 48, 54, 60, 64
38	LXI (Sears)	19, 54, 56, 59, 60, 62, 63, 65, 71	81	Yamaha	18
39	Magnavox	15, 17, 18, 48, 54, 59, 60, 62, 72, 89	82	York	40
40	Marantz	40, 54	83	Yupiteru	03
41	Matsui	54	84	Zenith	58, 79
42	MGA	18, 40	85	Zonda	01
43	Mitsubishi/MGA	18, 40, 59, 60, 75	86	Dongyang	03, 54

Troubleshooting

Refer to the chart below when this unit does not function properly. If the problem you are experiencing is not listed below or if the instruction below does not help, turn off the unit, disconnect the power cord, and contact the nearest authorized dealer or Samsung Electronics Service Center.


Symptom	Check/Remedy
I cannot eject the disc.	<ul style="list-style-type: none">Is the power cord plugged securely into the outlet?Turn off the power and then turn it back on.
Playback does not start.	<ul style="list-style-type: none">Check the region number of the DVD. DVD discs purchased from abroad may not be playable.CD-ROMs and DVD-ROMs cannot be played on this DVD player.Make sure that the rating level is correct.
Playback does not start immediately when the Play/Pause button is pressed.	<ul style="list-style-type: none">Are you using a deformed disc or a disc with scratches on the surface?Wipe the disc clean.
Sound is not produced.	<ul style="list-style-type: none">No sound is heard during fast playback, slow playback, and step motion playback.Are the speakers connected properly? Is the speaker setup correctly customized?Is the disc severely damaged?
Sound can be heard only from a few speakers and not all six.	<ul style="list-style-type: none">When listening to a CD or radio, sound is output to the front speakers (L/R) only. Select "PRO LOGIC II" by pressing  PL II (Dolby Pro Logic II) on the remote control to use all six speakers.Make sure that the DVD disc is 5.1-CH compatible.If you set C, SL, and SR to NONE in the speaker mode in the audio setup of the setup screen, no sound is heard from the center speaker and the front left and right speakers. Set C, SL, and SR to SMALL.
Dolby Digital 5.1 CH Surround Sound is not produced.	<ul style="list-style-type: none">Is there "Dolby Digital 5.1 CH" mark on the disc? Dolby Digital 5.1 CH Surround Sound is produced only if the disc is recorded with 5.1 channel sound.Is the audio language correctly set to DOLBY DIGITAL 5.1-CH in the information display?
The remote control does not work.	<ul style="list-style-type: none">Is the remote control being operated within its operation range of angle and distance?Are the batteries exhausted?Have you selected the mode(TV/DVD) functions of the remote control (TV or DVD) correctly?

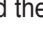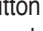Symptom	Check/Remedy
<ul style="list-style-type: none">Disc is rotating but no picture is produced.Picture quality is poor and picture is shaking.	<ul style="list-style-type: none">Is the TV power on?Are the video cables connected properly?Is the disc dirty or damaged?A poorly manufactured disc may not be playable.
Audio language and subtitles do not work.	<ul style="list-style-type: none">Audio language and subtitles will not work for DVDs not containing them. And depending on the disc, they may work differently.
Menu screen does not appear even when the menu function is selected.	<ul style="list-style-type: none">Are you using a disc that does not contain menus?
Aspect ratio cannot be changed.	<ul style="list-style-type: none">You can play 16:9 DVDs in 16:9 WIDE mode, 4:3 LETTER BOX mode, or 4:3 PAN SCAN mode, but 4:3 DVDs can be seen in 4:3 ratio only. Refer to the DVD disc jacket and then select the appropriate function.
<ul style="list-style-type: none">The main unit is not working. (Example: The power goes out or strange noise is heard.)The DVD player is not working normally.	<ul style="list-style-type: none">Turn off the power and hold the STOP() button on the main unit for longer than 5 seconds. <p>Using the RESET function will erase all stored settings. Do not use this unless necessary.</p>
The password for rating level has been forgotten.	<ul style="list-style-type: none">While "NO DISC" message appears on the display of main unit, hold the main unit's STOP() button for longer than 5 seconds. "INITIALIZE" appears on the display and all settings will return to the default values.Press the POWER button. <p>Using the RESET function will erase all stored settings. Do not use this unless necessary.</p>
Can't receive radio broadcast.	<ul style="list-style-type: none">Is the antenna connected properly?If the antenna's input signal is weak, install an external FM antenna in an area with good reception.
While listening to TV audio through the main unit, no sound is heard.	<ul style="list-style-type: none">If the eject button is pressed while listening to TV audio using the D.IN1, D.IN2, AUX functions, the DVD functions are turned on and this stops the TV audio.

Cautions on Handling and Storing Discs

Small scratches on the disc may reduce sound and picture quality or cause skipping.
Be especially careful not to scratch discs when handling them.


Handling discs

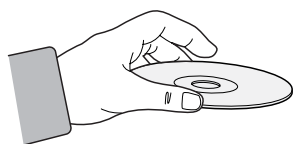


Do not touch the playback side of the disc.
Hold the disc by the edges so that fingerprints will not get on the surface.
Do not stick paper or tape on the disc.

Disc Storage

Do not keep in direct sunlight

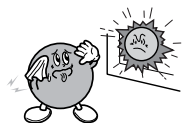

Keep in a cool ventilated area



Keep in a clean Protection j acket.
Store vertically.



- Do not allow the discs to become contaminated with dirt.
- Do not load cracked or scratched discs.

Handling and Storing Discs



When you get fingerprints or dirt on the disc, clean it with a mild detergent diluted in water and wipe with a soft cloth.

- When cleaning, wipe gently from the inside to the outside of the disc.



- Condensation may form if warm air comes into contact with cold parts inside the player. When condensation forms inside the player, the player may not operate correctly. If this occurs, remove the disc and let the player stand for 1 or 2 hours with the power on.

Language Code List

Enter the appropriate code number for the initial settings "Disc Audio", "Disc Subtitle" and/or "Disc Menu" (See page 44).

Code	Language	Code	Language	Code	Language	Code	Language
1027	Afar	1181	Frisian	1334	Latvian, Lettish	1506	Slovenian
1028	Abkhazian	1183	Irish	1345	Malagasy	1507	Samoan
1032	Afrikaans	1186	Scots Gaelic	1347	Maori	1508	Shona
1039	Amharic	1194	Galician	1349	Macedonian	1509	Somali
1044	Arabic	1196	Guarani	1350	Malayalam	1511	Albanian
1045	Assamese	1203	Gujarati	1352	Mongolian	1512	Serbian
1051	Aymara	1209	Hausa	1353	Moldavian	1513	Siswati
1052	Azerbaijani	1217	Hindi	1356	Marathi	1514	Sesotho
1053	Bashkir	1226	Croatian	1357	Malay	1515	Sundanese
1057	Byelorussian	1229	Hungarian	1358	Maltese	1516	Swedish
1059	Bulgarian	1233	Armenian	1363	Burmese	1517	Swahili
1060	Bihari	1235	Interlingua	1365	Nauru	1521	Tamil
1069	Bislama	1239	Interlingue	1369	Nepali	1525	Tegulu
1066	Bengali; Bangla	1245	Inupiak	1376	Dutch	1527	Tajik
1067	Tibetan	1248	Indonesian	1379	Norwegian	1528	Thai
1070	Breton	1253	Icelandic	1393	Occitan	1529	Tigrinya
1079	Catalan	1254	Italian	1403	(Afan) Oromo	1531	Turkmen
1093	Corsican	1257	Hebrew	1408	Oriya	1532	Tagalog
1097	Czech	1261	Japanese	1417	Punjabi	1534	Setswana
1103	Welsh	1269	Yiddish	1428	Polish	1535	Tonga
1105	Danish	1283	Javanese	1435	Pashto, Pushto	1538	Turkish
1109	German	1287	Georgian	1436	Portuguese	1539	Tsonga
1130	Bhutani	1297	Kazakh	1463	Quechua	1540	Tatar
1142	Greek	1298	Greenlandic	1481	Rhaeto-Romance	1543	Twi
1144	English	1299	Cambodian	1482	Kirundi	1557	Ukrainian
1145	Esperanto	1300	Kannada	1483	Romanian	1564	Urdu
1149	Spanish	1301	Korean	1489	Russian	1572	Uzbek
1150	Estonian	1305	Kashmiri	1491	Kinyarwanda	1581	Vietnamese
1151	Basque	1307	Kurdish	1495	Sanskrit	1587	Volapuk
1157	Persian	1311	Kirghiz	1498	Sindhi	1613	Wolof
1165	Finnish	1313	Latin	1501	Sangro	1632	Xhosa
1166	Fiji	1326	Lingala	1502	Serbo-Croatian	1665	Yoruba
1171	Faeroese	1327	Laothian	1503	Singhalese	1684	Chinese
1174	French	1332	Lithuanian	1505	Slovak	1697	Zulu

USB Host Feature Supported Products

Digital Camera

Product	Company	Type
Finepix-A340	Fuji	Digital Camera
Finepix-F810	Fuji	Digital Camera
Finepix-F610	Fuji	Digital Camera
Finepix-f450	Fuji	Digital Camera
Finepix S7000	Fuji	Digital Camera
Finepix A310	Fuji	Digital Camera
KD-310Z	Konica	Digital Camera
Finecam SL300R	Kyocera	Digital Camera
Finecam SL400R	Kyocera	Digital Camera
Finecam S5R	Kyocera	Digital Camera
Finecam Xt	Kyocera	Digital Camera
Dimage-Z1	Minolta	Digital Camera
Dimage Z1	Minolta	Digital Camera
Dimage X21	Minolta	Digital Camera
Coolpix4200	Nikon	Digital Camera
Coolpix4300	Nikon	Digital Camera
Coolpix 2200	Nikon	Digital Camera
Coolpix 3500	Nikon	Digital Camera
Coolpix 3700	Nikon	Digital Camera
Coolpix 4100	Nikon	Digital Camera
Coolpix 5200	Nikon	Digital Camera
Stylus 410 digital	Olympus	Digital Camera
300-digital	Olympus	Digital Camera
U300	Olympus	Digital Camera
X-350	Olympus	Digital Camera
C-760	Olympus	Digital Camera
C-5060	Olympus	Digital Camera
X1	Olympus	Digital Camera
U-mini	Olympus	Digital Camera
Lumix-FZ20	Panasonic	Digital Camera
DMC-FX7GD	Panasonic	Digital Camera
Lumix LC33	Panasonic	Digital Camera
LUMIX DMC-F1	Panasonic	Digital Camera
Optio-S40	Pentax	Digital Camera
Optio-S50	Pentax	Digital Camera
Optio 33LF	Pentax	Digital Camera
Optio MX	Pentax	Digital Camera
Digimax-420	Samsung	Digital Camera
Digimax-400	Samsung	Digital Camera
Sora PDR-T30	Toshiba	Digital Camera
Coolpix 5900	Nikon	Digital Camera
Coolpix S1	Nikon	Digital Camera
Coolpix 7600	Nikon	Digital Camera
DMC-FX7	Panasonic	Digital Camera
Dimage Xt	Minolta	Digital Camera
AZ-1	Olympus	Digital Camera

USB Flash Disk

Product	Company	Type
Cruzer Micro	Sandisk	USB 2.0 USB Flash Drive 128M
Cruzer Mini	Sandisk	USB 2.0 128M
Cruzer Mini	Sandisk	USB 2.0 256M
SONY Micro Vault	Sony	USB 2.0 64MB
FLEX DRIVE	Serotech	USB 2.0 32MB
AnyDrive	A.L tech	USB 2.0 128MB
XTICK	LG	USB 2.0 128M
Micro Mini	lomega	USB 2.0 128M
iFlash	Imation	USB 2.0 64M
LG	XTICK(M)	USB 2.0 64M
RIDATA	EZDrive	USB 2.0 64M

MP3 Player

Product	Company	Type
Creative MuVo NX128M	Creative	128 MB MP3 Player
Iriver H320	Iriver	20G HDD MP3 Player
YH-920	Samsung	20G HDD MP3 Player
YP-T7	Samsung	MP3 Player
YP-MT6	Samsung	MP3 Player
YP-T6	Samsung	MP3 Player
YP-53	Samsung	MP3 Player
YP-ST5	Samsung	MP3 Player
YP-T5	Samsung	MP3 Player
YP-60	Samsung	MP3 Player
YP-780	Samsung	MP3 Player
YP-35	Samsung	MP3 Player
YP-55	Samsung	MP3 Player
iAUDIO U2	Cowon	MP3 Player
iAUDIO G3	Cowon	MP3 Player
iAudio M3	Cowon	HDD MP3 Player
SI-M500L	Sharp	256MB MP3 Player
H10	Iriver	MP3 Player
YP-T5 VB	Samsung	MP3 Player
YP-53	Samsung	256MB MP3 Player

USB External HDD

Product	Company	Type
MOMOBAY UX-2	Dvico	USB 2.0

Specifications

GENERAL	Power Consumption	110W
	Weight	5 kg
	Dimensions (W x H x D)	521 x 320 x 178 mm
	Operating Temperature Range	+5°C ~ +35°C
	Operating Humidity Range	10% ~ 75%
FM TUNER	Usable Sensitivity	10dB
	S/N Ratio	60dB
	Distortion	0.5%
VIDEO OUTPUT	Composite Video	1.0Vp-p(75Ω load)
	Component Video	Y:1.0Vp-p(75Ω load)
		Pr:0.70Vp-p(75Ω load)
		Pb:0.70Vp-p(75Ω load)
	HDMI	Impedance: 85~115 Ω
AMPLIFIER	Front speaker output	167W x 2(3Ω)
	Center speaker output	167W (3Ω)
	Rear speaker output	167W x 2(3Ω)
	Subwoofer speaker output	165W(3Ω)
	Frequency range	20Hz~20KHz
	S/N Ratio	70dB
	Channel separation	60dB
	Input sensitivity	(AUX)500mV

SPEAKER	Speaker system	5.1ch speaker system			
		Front/Center/Rear speaker		Subwoofer speaker	
	Impedance	3Ω (DCR 3.4Ω)		3Ω (DCR 3.4Ω)	
	Frequency range	100Hz~20kHz		45Hz~150Hz	
	Output sound pressure level	84dB/W/M		86dB/W/M	
	Rated input	167W		165W	
	Maximum input	334W		330W	
	Dimensions (W x H x D)	Front/Rear	340 x 1320 x 340 mm	Subwoofer	270 x 420 x 489 mm
		Center	550 x 137 x 85 mm		
	Weights	Front/Rear	6.28 kg	Subwoofer	15.8 kg
		Center	2.22 kg		

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

Region	Country	Customer Care Center	Web Site
North America	CANADA	1-800-SAMSUNG (7267864)	www.samsung.com/ca
	MEXICO	01-800-SAMSUNG (7267864)	www.samsung.com/mx
	U.S.A	1-800-SAMSUNG (7267864)	www.samsung.com
Latin America	ARGENTINE	0800-333-3733	www.samsung.com/ar
	BRAZIL	0800-124-421 4004-0000	www.samsung.com/br
	CHILE	800-726-7864 (SAMSUNG)	www.samsung.com/cl
	COSTA RICA	0-800-507-7267	www.samsung.com/latin
	ECUADOR	1-800-10-7267	www.samsung.com/latin
	EL SALVADOR	800-6225	www.samsung.com/latin
	GUATEMALA	1-800-299-0013	www.samsung.com/latin
	JAMAICA	1-800-234-7267	www.samsung.com/latin
	PANAMA	800-7267	www.samsung.com/latin
	PUERTO RICO	1-800-682-3180	www.samsung.com/latin
	REP. DOMINICA	1-800-751-2676	www.samsung.com/latin
	TRINIDAD & TOBAGO	1-800-7267-864	www.samsung.com/latin
	VENEZUELA	0-800-100-5303	www.samsung.com/latin
Europe	COLOMBIA	01-8000112112	www.samsung.com.co
	BELGIUM	02 201 2418	www.samsung.com/be
	CZECH REPUBLIC	844 000 844 Distributor pro Českou republiku : Samsung Zrt., česká organizační složka Vyskočilova 4, 14000 Praha 4	www.samsung.com/cz
	DENMARK	70 70 19 70	www.samsung.com/dk
	FINLAND	030-6227 515	www.samsung.com/fi
	FRANCE	3260 SAMSUNG or 08 25 08 65 65 (€ 0,15/Min)	www.samsung.com/fr
	GERMANY	01805 - 121213 (€ 0,14/Min)	www.samsung.de
	HUNGARY	06-80-SAMSUNG (7267864)	www.samsung.com/hu
	ITALIA	800-SAMSUNG (7267864)	www.samsung.com/it
	LUXEMBURG	0032 (0)2 201 24 18	www.samsung.lu
	NETHERLANDS	0900 20 200 88 (€ 0,10/Min)	www.samsung.com/nl
	NORWAY	815-56 480	www.samsung.com/no
	POLAND	0 801 801 881	www.samsung.com/pl
	PORTUGAL	80 8 200 128	www.samsung.com/pt
	SLOVAKIA	0800-SAMSUNG (726786)	www.samsung.com/sk
	SPAIN	902 10 11 30	www.samsung.com/es
	SWEDEN	0771-400 200	www.samsung.com/se
	U.K	0870 SAMSUNG (7267864)	www.samsung.com/uk
	Republic of Ireland	0818 717 100	www.samsung.com/uk
	Switzerland	0800-7267864	www.samsung.com/ch
CIS	RUSSIA	8-800-200-0400	www.samsung.ru
	KAZAHSTAN	8-800-080-1188	www.samsung.kz
	UZBEKISTAN	8-800-120-0400	www.samsung.uz
	UKRAINE	8-800-502-0000	www.samsung.com/ur
	LITHUANIA	8-800-77777	www.samsung.lt
	LATVIA	800-7267	www.samsung.com/lv/index.htm
	ESTONIA	800-7267	www.samsung.ee
Asia Pacific	AUSTRALIA	1300 362 603	www.samsung.com/au
	CHINA	800-810-5858, 010-6475 1880	www.samsung.com.cn
	HONG KONG	3698 - 4698	www.samsung.com/hk
	INDIA	3030 8282 1800 110011	www.samsung.com/in
	INDONESIA	0800-112-8888	www.samsung.com/id
	JAPAN	0120-327-527	www.samsung.com/jp
	MALAYSIA	1800-88-9999	www.samsung.com/my
	PHILIPPINES	1800-10-SAMSUNG (7267864)	www.samsung.com/ph
	SINGAPORE	1800-SAMSUNG (7267864)	www.samsung.com/sg
	THAILAND	1800-29-3232 02-689-3232	www.samsung.com/th
	TAIWAN	0800-329-999	www.samsung.com/tw
	VIETNAM	1 800 588 889	www.samsung.com/vn
Middle East & Africa	SOUTH AFRICA	0860 7267864 (SAMSUNG)	www.samsung.com/za
	U.A.E	800SAMSUNG (7267864) 8000-4726	www.samsung.com/mea